



ARIB STD-T104-36.463 V13.1.0

**Evolved Universal Terrestrial
Radio Access Network (E-UTRAN)
and Wireless LAN (WLAN); Xw
application protocol (XwAP)**

(Release 13)

3GPP TS 36.463 V13.1.0 (2016-06)

Technical Specification

**3rd Generation Partnership Project;
Technical Specification Group Radio Access Network;
Evolved Universal Terrestrial Radio Access Network (E-
UTRAN) and Wireless LAN (WLAN);
Xw application protocol (XwAP)
(Release 13)**



Keywords

LTE, radio, LAN

3GPP

Postal address

3GPP support office address

650 Route des Lucioles - Sophia Antipolis
Valbonne - FRANCE
Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Internet

<http://www.3gpp.org>

Copyright Notification

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© 2016, 3GPP Organizational Partners (ARIB, ATIS, CCSA, ETSI, TSDSI, TTA, TTC).
All rights reserved.

UMTS™ is a Trade Mark of ETSI registered for the benefit of its members
3GPP™ is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners
LTE™ is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners
GSM® and the GSM logo are registered and owned by the GSM Association

Contents

Foreword.....	6
1 Scope.....	7
2 References.....	7
3 Definitions, symbols and abbreviations	8
3.1 Definitions	8
3.2 Abbreviations.....	8
4 General	8
4.1 Procedure specification principles	8
4.2 Forwards and backwards compatibility	9
4.3 Specification notations.....	9
5 XwAP services	9
5.1 General.....	9
5.2 XwAP procedures	9
5.3 Parallel transactions	10
6 Services expected from signalling transport	10
7 Functions of XwAP.....	10
8 XwAP procedures	10
8.1 Elementary procedures	10
8.2 Xw Setup	11
8.2.1 General.....	11
8.2.2 Successful Operation.....	11
8.2.3 Unsuccessful Operation.....	12
8.2.4 Abnormal Conditions	12
8.3 WT Configuration Update	12
8.3.1 General.....	12
8.3.2 Successful Operation.....	12
8.3.3 Unsuccessful Operation.....	13
8.3.4 Abnormal Conditions	13
8.4 WT Status Reporting Initiation.....	13
8.4.1 General.....	13
8.4.2 Successful Operation.....	13
8.4.3 Unsuccessful Operation.....	14
8.4.4 Abnormal Conditions	14
8.5 WT Status Reporting	15
8.5.1 General	15
8.5.2 Successful Operation.....	15
8.5.3 Unsuccessful Operation.....	15
8.5.4 Abnormal Conditions	15
8.6 Error Indication.....	15
8.6.1 General	15
8.6.2 Successful Operation.....	16
8.6.3 Unsuccessful Operation.....	16
8.6.4 Abnormal Conditions	16
8.7 Reset	16
8.7.1 General	16
8.7.2 Successful Operation.....	17
8.7.3 Unsuccessful Operation.....	17
8.7.4 Abnormal Conditions	17
8.8 WT Addition Preparation.....	17
8.8.1 General.....	17

8.8.2	Successful Operation.....	18
8.8.3	Unsuccessful Operation.....	18
8.8.4	Abnormal Conditions	19
8.9	eNB Initiated WT Modification.....	19
8.9.1	General	19
8.9.2	Successful Operation.....	19
8.9.3	Unsuccessful Operation.....	20
8.9.4	Abnormal Conditions	20
8.10	WT Initiated WT Modification.....	21
8.10.1	General	21
8.10.2	Successful Operation.....	21
8.10.3	Unsuccessful Operation.....	21
8.10.4	Abnormal Conditions	22
8.11	eNB Initiated WT Release	22
8.11.1	General	22
8.11.2	Successful Operation.....	22
8.11.3	Unsuccessful Operation.....	22
8.11.4	Abnormal Conditions	22
8.12	WT Initiated WT Release	23
8.12.1	General	23
8.12.2	Successful Operation.....	23
8.12.3	Unsuccessful Operation.....	23
8.12.4	Abnormal Conditions	23
8.13	WT Association Confirmation.....	23
8.13.1	General	23
8.13.2	Successful Operation.....	24
8.13.3	Unsuccessful Operation.....	24
8.13.4	Abnormal Conditions	24
9	Elements for XwAP Communication.....	24
9.0	General.....	24
9.1	Message Functional Definition and Content.....	24
9.1.1	Xw SETUP REQUEST.....	24
9.1.2	Xw SETUP RESPONSE.....	24
9.1.3	Xw SETUP FAILURE.....	25
9.1.4	WT CONFIGURATION UPDATE	25
9.1.5	WT CONFIGURATION UPDATE ACKNOWLEDGE	26
9.1.6	WT CONFIGURATION UPDATE FAILURE	26
9.1.7	WT STATUS REQUEST.....	27
9.1.8	WT STATUS RESPONSE.....	28
9.1.9	WT STATUS FAILURE.....	29
9.1.10	WT STATUS REPORT	31
9.1.11	ERROR INDICATION	31
9.1.12	RESET	31
9.1.13	RESET RESPONSE.....	31
9.1.14	WT ADDITION REQUEST	32
9.1.15	WT ADDITION REQUEST ACKNOWLEDGE	32
9.1.16	WT ADDITION REQUEST REJECT	33
9.1.17	WT MODIFICATION REQUEST	33
9.1.18	WT MODIFICATION REQUEST ACKNOWLEDGE.....	34
9.1.19	WT MODIFICATION REQUEST REJECT	35
9.1.20	WT MODIFICATION REQUIRED	36
9.1.21	WT MODIFICATION CONFIRM	36
9.1.22	WT MODIFICATION REFUSE.....	37
9.1.23	WT RELEASE REQUEST	37
9.1.24	WT RELEASE REQUIRED	37
9.1.25	WT RELEASE CONFIRM.....	38
9.1.26	WT ASSOCIATION CONFIRMATION.....	38
9.2	Information Element definitions	38
9.2.0	General	38
9.2.1	Message Type.....	39
9.2.2	Global eNB ID	39

9.2.3	PLMN Identity	39
9.2.4	Cause	39
9.2.5	Criticality Diagnostics	42
9.2.6	WT ID	42
9.2.7	WLAN Information.....	43
9.2.8	BSSID	43
9.2.9	SSID	44
9.2.10	HESSID.....	44
9.2.11	BSS Load	44
9.2.12	WAN Metrics	44
9.2.13	WLAN Band Information	45
9.2.14	Channel Utilization	45
9.2.15	WLAN Backhaul Rate	45
9.2.16	UE Identity	45
9.2.17	Bit Rate	45
9.2.18	E-RAB ID	46
9.2.19	E-RAB Level QoS Parameters	46
9.2.20	Allocation and Retention Priority.....	46
9.2.21	GBR QoS Information	47
9.2.22	GTP Tunnel Endpoint	48
9.2.23	E-RAB List	48
9.2.24	UE XwAP ID	48
9.2.25	Station Count.....	48
9.2.26	Available Channel Utilization	48
9.2.27	WLAN Security Information.....	49
9.2.28	Mobility Set.....	49
9.3	Message and Information Element Abstract Syntax (with ASN.1)	50
9.3.1	General	50
9.3.2	Usage of Private Message Mechanism for Non-standard Use	50
9.3.3	Elementary Procedure Definitions	50
9.3.4	PDU Definitions.....	56
9.3.5	Information Element definitions	74
9.3.6	Common definitions	85
9.3.7	Constant definitions	86
9.3.8	Container definitions	89
9.4	Message transfer syntax.....	94
10	Handling of unknown, unforeseen and erroneous protocol data.....	94
Annex A (informative): Change history		94

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the signalling procedures of the control plane between an eNB and WLAN Termination (WT). The Xw Application Protocol (XwAP) supports the functions of Xw interface by signalling procedures defined in this document.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2".
- [3] 3GPP TS 29.281: "General Packet Radio System (GPRS) Tunnelling Protocol User Plane (GTPv1-U)".
- [4] 3GPP TS 36.462: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN) and Wireless LAN (WLAN); Xw signalling support"
- [5] ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules - Specification of Packed Encoding Rules (PER) ".
- [6] ITU-T Recommendation X.680 (07/2002): "Information technology – Abstract Syntax Notation One (ASN.1): Specification of basic notation".
- [7] ITU-T Recommendation X.681 (07/2002): "Information technology – Abstract Syntax Notation One (ASN.1): Information object specification".
- [8] 3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 Application Protocol (S1AP)".
- [9] 3GPP TS 36.401: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Architecture description".
- [10] Wi-Fi Alliance® Technical Committee, Hotspot 2.0 Technical Task Group Hotspot 2.0 (Release 2) Technical Specification Version 3.11.
- [11] IEEE Std 802.11™-2012, IEEE Standard for Information technology-Telecommunications and information exchange between systems-Local and metropolitan area network.
- [12] 3GPP TR 25.921: "Guidelines and principles for protocol description and error handling"
- [13] 3GPP TS 23.203: "Numbering, addressing and identification"
- [14] 3GPP TS 23.401: "General Packet Radio Service (GPRS) enhancements for Evolved Universal Terrestrial Radio Access Network (E-UTRAN) access"
- [15] 3GPP TS 36.464: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN) and Wireless LAN (WLAN); Xw data transport"

- [16] 3GPP TS 29.281: “General Packet Radio System (GPRS) Tunnelling Protocol User Plane (GTPv1-U)”
- [17] 3GPP TS 33.401: “3GPP System Architecture Evolution (SAE); Security architecture”

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

Elementary Procedure: XwAP protocol consists of Elementary Procedures (EPs). An XwAP Elementary Procedure is a unit of interaction between an eNB and WT. An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- **Class 1:** Elementary Procedures with response (success or failure),
- **Class 2:** Elementary Procedures without response.

E-RAB: Defined in TS 36.401 [9].

LWA bearer: Defined in TS 36.300 [2].

WLAN Termination: Defined in TS 36.300 [2].

3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

DL	Downlink
eNB	E-UTRAN NodeB
EP	Elementary Procedure
EPC	Evolved Packet Core
E-RAB	E-UTRAN Radio Access Bearer
E-UTRAN	Evolved UTRAN
IE	Information Element
LWA	LTE/WLAN Aggregation
PDCP	Packet Data Convergence Protocol
RCLWI	RAN Controlled LTE-WLAN Interworking
SN	Sequence Number
TAC	Tracking Area Code
UE	User Equipment
UL	Uplink
WT	WLAN Termination
Xw UP	Xw User Plane

4 General

4.1 Procedure specification principles

The principle for specifying the procedure logic is to specify the functional behaviour of the terminating node exactly and completely. Any rule that specifies the behaviour of the originating node shall be possible to be verified with information that is visible within the system.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:

1) Functionality which "shall" be executed

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the initiating message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

2) Functionality which "shall, if supported" be executed

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see section 10.

4.2 Forwards and backwards compatibility

The forwards and backwards compatibility of the protocol is assured by a mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification notations

For the purposes of the present document, the following notations apply:

Procedure	When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g. Handover Preparation procedure.
Message	When referring to a message in the specification the MESSAGE NAME is written with all letters in upper case characters followed by the word "message", e.g. HANDOVER REQUEST message.
IE	When referring to an information element (IE) in the specification the <i>Information Element Name</i> is written with the first letters in each word in upper case characters and all letters in Italic font followed by the abbreviation "IE", e.g. <i>E-RAB ID</i> IE.
Value of an IE	When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in sub clause 9.2 enclosed by quotation marks, e.g. "Value".

5 XwAP services

5.1 General

The present clause describes the services offered between an eNB and WT.

5.2 XwAP procedures

The Xw interface XwAP procedures may be UE-associated or non UE-associated. UE-associated XwAP procedures are used to handle the configuration and modification to support LWA for a specific UE. Non UE-associated procedures support LWA and RCLWI, and are not related to a specific UE.

5.3 Parallel transactions

Unless explicitly indicated in the procedure specification, at any instance in time one protocol peer shall have a maximum of one ongoing XwAP procedure related to a certain UE.

6 Services expected from signalling transport

The signalling connection shall provide in sequence delivery of XwAP messages. XwAP shall be notified if the signalling connection breaks.

Xw signalling transport is described in TS 36.462 [4].

7 Functions of XwAP

The XwAP protocol provides the following functions:

- Setting up the Xw. This function is used to exchange the necessary data for the eNB and the WT to set up the Xw interface and implicitly perform an Xw Reset.
- WT Configuration Update. This function allows updating of application level data needed for the eNB and the WT to interoperate correctly on the Xw interface.
- WLAN Status Reporting. This function allows the eNB to configure reporting of load-related information from the WT.
- LTE-WLAN Aggregation. This function allows the eNB to request a WT to provide radio resources for a certain UE while keeping responsibility for that UE.
- Reporting of General Error Situations. This function allows reporting of general error situations, for which function specific error messages have not been defined.
- Resetting the Xw. This function is used to reset the Xw interface.

The mapping between the above functions and Xw EPs is shown in the table below.

Table 7-1: Mapping between XwAP functions and XwAP EPs

Function	Elementary Procedure(s)
WLAN Status Reporting	a) WT Status Reporting Initiation b) WT Status Reporting
Setting up the Xw	Xw Setup
WT Configuration Update	WT Configuration Update
LTE-WLAN Aggregation	a) WT Addition Preparation b) WT Association Confirmation c) eNB Initiated WT Modification d) WT Initiated WT Modification e) eNB Initiated WT Release f) WT Initiated WT Release
Reporting of General Error Situations	Error Indication
Resetting the Xw	Reset

8 XwAP procedures

8.1 Elementary procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs.

Table 8.1-1: Class 1 Elementary Procedures

Elementary Procedure	Initiating Message	Successful Outcome	Unsuccessful Outcome
		Response message	Response message
Xw Setup	Xw SETUP REQUEST	Xw SETUP RESPONSE	Xw SETUP FAILURE
WT Configuration Update	WT CONFIGURATION UPDATE	WT CONFIGURATION UPDATE ACKNOWLEDGE	WT CONFIGURATION UPDATE FAILURE
WT Status Reporting Initiation	WT STATUS REQUEST	WT STATUS RESPONSE	WT STATUS FAILURE
WT Addition Preparation	WT ADDITION REQUEST	WT ADDITION REQUEST ACKNOWLEDGE	WT ADDITION REQUEST REJECT
eNB Initiated WT Modification	WT MODIFICATION REQUEST	WT MODIFICATION REQUEST ACKNOWLEDGE	WT MODIFICATION REQUEST REJECT
WT Initiated WT Modification	WT MODIFICATION REQUIRED	WT MODIFICATION CONFIRM	WT MODIFICATION REFUSE
WT Initiated WT Release	WT RELEASE REQUEST	WT RELEASE CONFIRM	
Reset	RESET REQUEST	RESET RESPONSE	

Table 8.1-2: Class 2 Elementary Procedures

Elementary Procedure	Initiating Message
WT Status Reporting	WT STATUS REPORT
Error Indication	ERROR INDICATION
WT Association Confirmation	WT ASSOCIATION CONFIRMATION
eNB Initiated WT Release	WT RELEASE REQUEST

8.2 Xw Setup

8.2.1 General

The purpose of the Xw Setup procedure is to exchange application level configuration data needed for the eNB and the WT to interoperate correctly over the Xw interface. This procedure erases any existing application level configuration data in the two nodes and replaces it by the one received. This procedure also resets the Xw interface.

The procedure uses non-UE-associated signalling.

8.2.2 Successful Operation

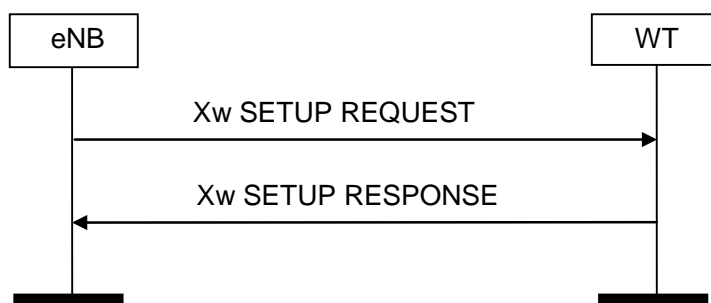


Figure 8.2.2-1: Xw Setup, successful operation

An eNB initiates the procedure by sending the Xw SETUP REQUEST message to a candidate WT. The candidate WT replies with the Xw SETUP RESPONSE message. The candidate WT shall reply with a list of relevant WLAN identifiers.

8.2.3 Unsuccessful Operation

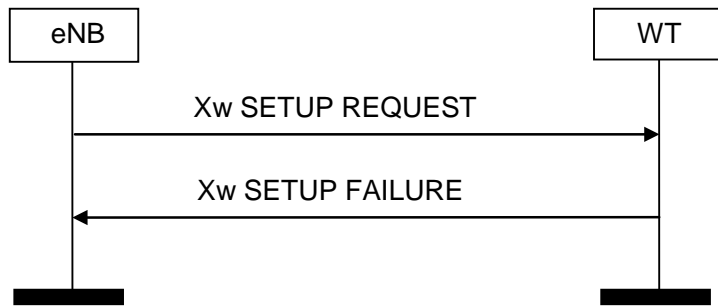


Figure 8.2.3-1: Xw Setup, unsuccessful operation

If the candidate WT cannot accept the setup, it shall respond with an Xw SETUP FAILURE message with an appropriate cause value.

8.2.4 Abnormal Conditions

If the first message received for a specific TNL association is not an Xw SETUP REQUEST, Xw SETUP RESPONSE, or Xw SETUP FAILURE message, then this shall be treated as a logical error.

8.3 WT Configuration Update

8.3.1 General

The purpose of the WT Configuration Update procedure is to update application level configuration data needed for an eNB and a WT to interoperate correctly over the Xw interface.

The procedure uses non-UE-associated signalling.

8.3.2 Successful Operation

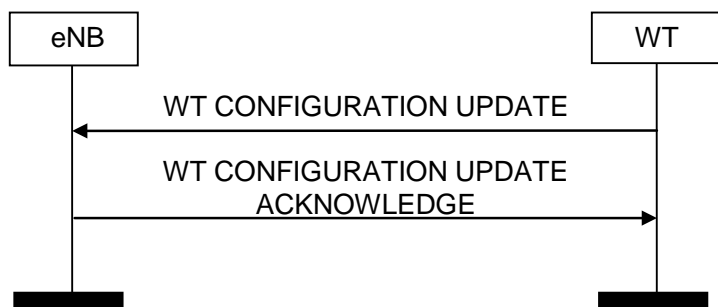


Figure 8.3.2-1: WT Configuration Update, successful operation

A WT initiates the procedure by sending a WT CONFIGURATION UPDATE message to an eNB. Such message shall include an appropriate set of up-to-date configuration data, including, but not limited to, relevant lists of added, modified and deleted WLAN identifiers that the WT has just taken into operational use.

8.3.3 Unsuccessful Operation

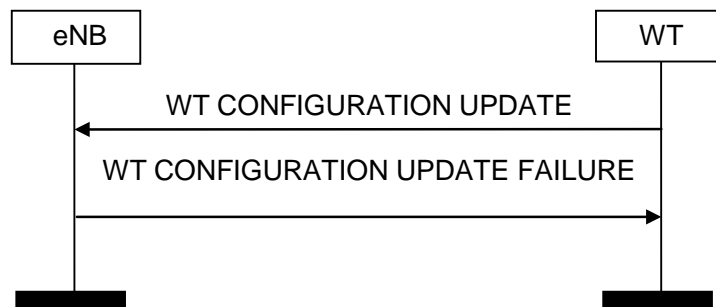


Figure 8.3.3-1: WT Configuration Update, successful operation

If the eNB cannot accept the update, it shall respond with a WT CONFIGURATION UPDATE FAILURE message with an appropriate cause value.

8.3.4 Abnormal Conditions

Not applicable.

8.4 WT Status Reporting Initiation

8.4.1 General

This procedure is used by an eNB to request the reporting of load measurements to a WT.

The procedure uses non-UE-associated signalling.

8.4.2 Successful Operation

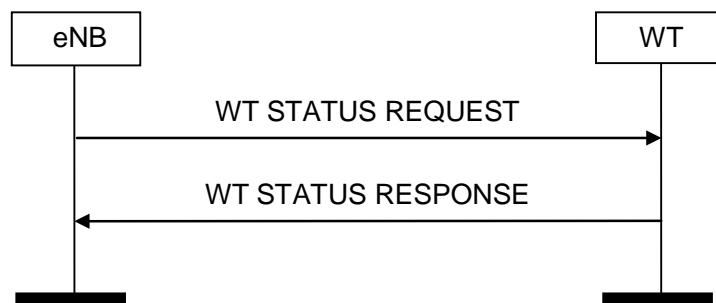


Figure 8.4.2-1: WT Status Reporting Initiation procedure, successful operation

The procedure is initiated with a WT STATUS REQUEST message sent from the eNB to the WT. Upon receipt, the WT shall initiate the requested measurement according to the parameters given in the request in case the *Registration Request* IE is set to "start" and shall stop all measurements and terminate the reporting in case the *Registration Request* IE is set to "stop".

If the *Registration Request* IE is set to "start" then the *Report Characteristics* IE shall be included in WT STATUS REQUEST message.

The *Report Characteristics* IE indicates the type of objects WT shall perform measurements on.

For each BSS, the WT shall include in the WT STATUS REPORT message:

- the *BSS Load* IE, if the first bit, "BSS Load" of the *Report Characteristics* IE included in the WT STATUS REQUEST message is set to 1;

- the *WAN Metrics* IE, if the second bit, “WAN Metrics” of the *Report Characteristics* IE included in the WT STATUS REQUEST message is set to 1;
- the *Available Channel Utilization* IE, if the third bit, “Available Channel Utilization” of the *Report Characteristics* IE included in the WT STATUS REQUEST message is set to 1.

If the *Reporting Periodicity* IE is included in the WT STATUS REQUEST message, the WT shall use its value as the time interval between two subsequent WT STATUS REPORT messages.

If the WT is capable to provide all requested resource status information, it shall initiate the measurement as requested by the eNB, and respond with the WT STATUS RESPONSE message.

If the WT is capable to provide some but not all of the requested resource status information and the *Partial Success Indicator* IE is present in the WT STATUS REQUEST, it shall initiate the measurement for the admitted measurement objects and include the *Measurement Initiation Result* IE in the WT STATUS RESPONSE message.

If the WT received a WT STATUS REQUEST message which includes the *Registration Request* IE set to "stop", it shall ignore the *Report Characteristics*, the *BSS To Report List*, the *Reporting Periodicity*, and the *Partial Success Indicator* IEs.

8.4.3 Unsuccessful Operation

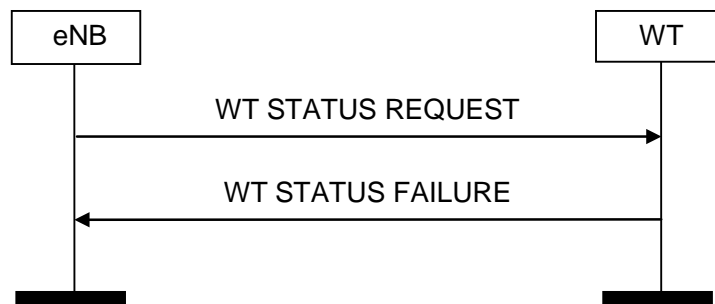


Figure 8.4.3-1: WT Status Reporting Initiation procedure, unsuccessful operation

If none of the requested measurements can be initiated, the WT shall send a WT STATUS FAILURE message. The *Cause* IE shall be set to an appropriate value for each requested measurement object. The eNB may include the *Complete Failure Cause Information* IE in the WT STATUS FAILURE message.

8.4.4 Abnormal Conditions

If the eNB does not receive either WT STATUS RESPONSE message or WT STATUS FAILURE message, the eNB may reinitiate the WT Status Reporting Initiation procedure towards the WT, provided that the content of the new WT STATUS REQUEST message is identical to the content of the previously unacknowledged WT STATUS REQUEST message.

If the eNB receives the WT STATUS RESPONSE message including the *Measurement Initiation Result* IE containing no admitted measurements, the eNB shall consider the procedure as failed.

If the *Registration Request* IE is set to "start" and the *Report Characteristics* IE bitmap is set to "0" (all bits are set to "0") in the WT STATUS REQUEST message, then the WT shall initiate a WT STATUS FAILURE message, the cause shall be set to appropriate value e.g. "ReportCharacteristicsEmpty".

If the *Registration Request* IE is set to "start" and the *Reporting Periodicity* IE value is not specified, then the WT shall initiate a WT STATUS FAILURE message, the cause shall be set to appropriate value e.g. "No Report Periodicity".

If the WT received a WT STATUS REQUEST message which includes the *Registration Request* IE set to "start" and the *eNB Measurement ID* IE corresponding to an existing on-going load measurement reporting, then the WT shall initiate a WT STATUS FAILURE message, the cause shall be set to appropriate value e.g. "ExistingMeasurement ID".

If the *Registration Request* IE is set to "stop" and the WT STATUS REQUEST message does not contain *WT Measurement ID* IE, the WT shall consider the procedure as failed and respond with the WT STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Unknown Measurement ID".

8.5 WT Status Reporting

8.5.1 General

This procedure is initiated by the WT to report the result of measurements admitted by the WT following a successful WT Status Reporting Initiation procedure.

The procedure uses non-UE-associated signalling.

8.5.2 Successful Operation

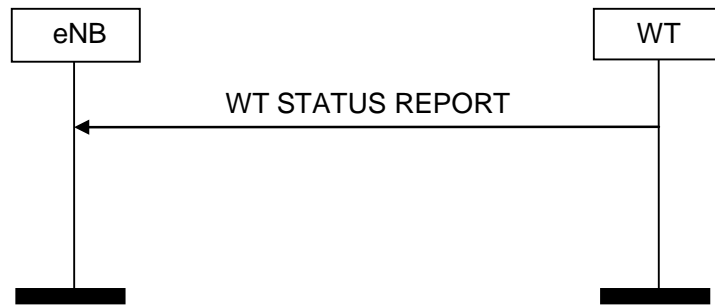


Figure 8.5.2-1: WT Status Reporting procedure, successful operation

The WT shall report the results of the admitted measurements in the WT STATUS REPORT message. The admitted measurements are the measurements that were successfully initiated during the preceding WT Status Reporting Initiation procedure.

8.5.3 Unsuccessful Operation

Not applicable.

8.5.4 Abnormal Conditions

Not applicable.

8.6 Error Indication

8.6.1 General

The Error Indication procedure is initiated by a node to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

If the error situation arises due to reception of a message which used UE-associated signalling, then the Error Indication procedure uses UE-associated signalling. Otherwise the procedure uses non UE-associated signalling.

8.6.2 Successful Operation



Figure 8.6.2-1: Error Indication procedure, eNB originated. Successful operation.



Figure 8.6.2-2: Error Indication procedure, WT originated. Successful operation.

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the receiving node.

The ERROR INDICATION message shall contain at least either the *Cause IE* or the *Criticality Diagnostics IE*. In case the Error Indication procedure is triggered by UE associated signalling, the *eNB UE XwAP ID IE* and the *WT UE XwAP ID IE* shall be included in the ERROR INDICATION message. If one or both of *eNB UE XwAP ID IE* and the *WT UE XwAP ID IE* are not correct, the cause shall be set to an appropriate value, e.g., “Unknown eNB UE XwAP ID”, “Unknown WT UE XwAP ID” or “Unknown pair of UE XwAP ID”.

8.6.3 Unsuccessful Operation

Not applicable.

8.6.4 Abnormal Conditions

Not applicable.

8.7 Reset

8.7.1 General

The purpose of the Reset procedure is to align the resources in the eNB and in the WT in the event of an abnormal failure. The procedure resets the Xw interface. This procedure does not affect the application level configuration data exchanged during, e.g., the Xw Setup procedure.

The procedure uses non UE-associated signalling.

8.7.2 Successful Operation

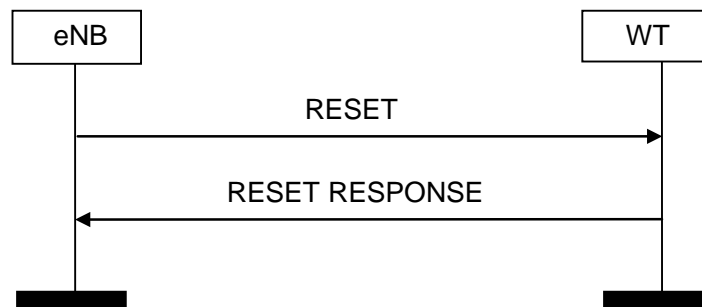


Figure 8.7.2-1: Reset, eNB-initiated. Successful operation.

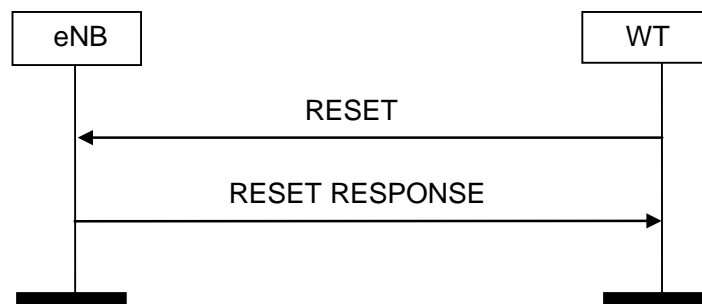


Figure 8.7.2-2: Reset, WT-initiated. Successful operation.

The procedure is initiated with a RESET message sent from the initiating node. Upon receipt of this message, the receiving node shall abort any other ongoing procedures (except another Reset procedure) over Xw with the initiating node. The receiving node shall delete all the context information related to the initiating node, except the application level configuration data exchanged during Xw Setup or WT Configuration Update procedures, and release the corresponding resources. After completing the release of the resources, the receiving node shall respond with a RESET RESPONSE message.

8.7.3 Unsuccessful Operation

Not applicable.

8.7.4 Abnormal Conditions

If Reset procedure is ongoing and the receiving node receives the RESET message from the peer entity on the same Xw interface, the receiving node shall respond with the RESET RESPONSE message as described in 8.7.2.

8.8 WT Addition Preparation

8.8.1 General

The purpose of the WT Addition Preparation procedure is to request the WT to allocate resources for LWA operation for a specific UE.

The procedure uses UE-associated signalling.

8.8.2 Successful Operation

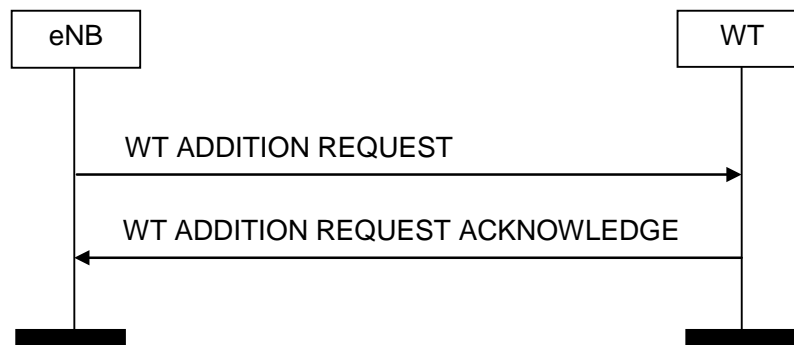


Figure 8.8.2-1: WT Addition Preparation, successful operation

The eNB initiates the procedures by sending the WT ADDITION REQUEST message to the WT.

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup Procedure in TS 36.413 [8].

NOTE: Due to inherent features of the WLAN radio interface, it may not always be possible to guarantee a bit rate. If the *GBR QoS Information* IE is present in the WT ADDITION REQUEST, the WT may accept the request even though it may not be able to guarantee the bit rate signalled in the *GBR QoS Information* IE. The eNB may therefore need to monitor the bit rate of offloaded GBR bearers.

If the WT ADDITION REQUEST message contains the *Serving PLMN* IE, the WT may take it into account for the allocation of resources for LWA.

At reception of the WT ADDITION REQUEST message the WT shall:

- use the information included in the *Mobility Set* IE as the WLAN Mobility Set configured for LWA, as defined in TS 36.300 [2];
- store the *WLAN Security Information* IE, if included, and use it to establish the required security relation towards the UE.

The WT shall report to the eNB, in the WT ADDITION REQUEST ACKNOWLEDGE message, the result for all the requested E-RABs in the following way:

- A list of E-RABs which are successfully established shall be included in the *E-RABs Admitted To Be Added List* IE.
- A list of E-RABs which failed to be established shall be included in the *E-RABs Not Admitted List* IE.

8.8.3 Unsuccessful Operation

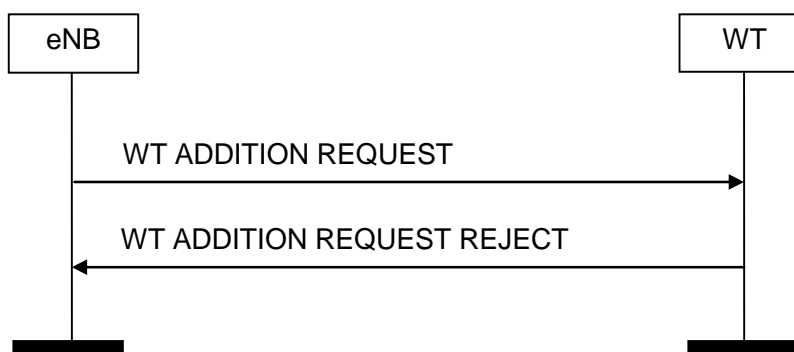


Figure 8.8.3-1: WT Addition Preparation, unsuccessful operation

If the WT is not able to accept at least one of the bearers or a failure occurs during the WT Addition Preparation, the WT sends the WT ADDITION REQUEST REJECT message with an appropriate cause value to the eNB.

8.8.4 Abnormal Conditions

If the WT receives a WT ADDITION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE) set to the same value, the WT shall consider the establishment of the corresponding E-RAB as failed.

If the WT receives a WT ADDITION REQUEST message containing an *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the WT shall consider the establishment of the corresponding E-RAB as failed.

8.9 eNB Initiated WT Modification

8.9.1 General

This procedure is used to enable an eNB to request a WT to modify the UE context at the WT.

The procedure uses UE-associated signalling.

8.9.2 Successful Operation

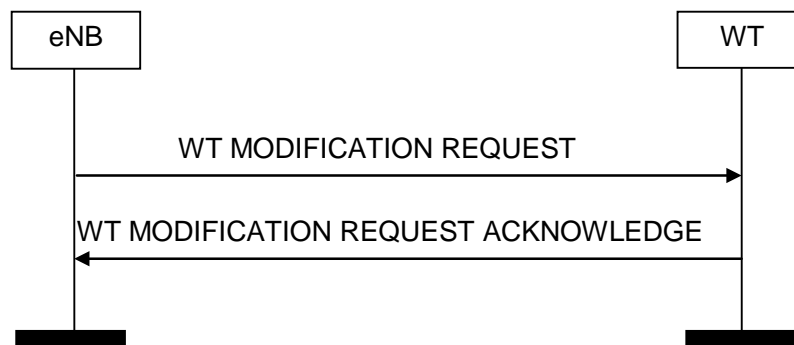


Figure 8.9.2-1: eNB initiated WT Modification, successful operation

The eNB initiates the procedure by sending the WT MODIFICATION REQUEST message to the WT.

The WT MODIFICATION REQUEST message may contain within the *UE Context Information* IE:

- E-RABs to be added within the *E-RABs To Be Added Item* IE;
- E-RABs to be modified within the *E-RABs To Be Modified Item* IE;
- E-RABs to be released within the *E-RABs To Be Released Item* IE;
- WLAN security information in the *WLAN Security Information* IE.

If the *WLAN Security Information* IE is included in the WT MODIFICATION REQUEST message the WT shall store the information contained in this IE, and use it to establish the required security relation towards the UE.

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [8].

NOTE: Due to inherent features of the WLAN radio interface, it may not always be possible to guarantee a bit rate. If the *GBR QoS Information* IE is present in the WT MODIFICATION REQUEST, the WT may accept the request even though it may not be able to guarantee the bit rate signalled in the *GBR QoS Information* IE. The eNB may therefore need to monitor the bit rate of offloaded GBR bearers.

If the WT MODIFICATION REQUEST message contains the *Serving PLMN* IE, the WT may take it into account for the allocation of resources for LWA.

If at least one of the requested modifications is admitted by the WT, the WT shall modify the related part of the UE context accordingly and send the WT MODIFICATION REQUEST ACKNOWLEDGE message back to the eNB.

The WT shall include the E-RABs for which resources have been either added or modified or released at the WT either in the *E-RABs Admitted To Be Added List* IE or the *E-RABs Admitted To Be Modified List* IE or the *E-RABs Admitted To Be Released List* IE. The WT shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

For each E-RAB to be modified, if the WT MODIFICATION REQUEST message includes the *eNB GTP Tunnel Endpoint* IE in the *E-RABs To Be Modified Item* IE, the WT shall act as specified in TS 36.300 [2].

For each E-RAB to be released, if the DL Forwarding GTP Tunnel Endpoint IE is included within the *E-RABs To Be Released Item* IE in the WT MODIFICATION REQUEST message, the WT may perform data forwarding of downlink packets for that bearer.

If the *E-RAB level QoS parameter* IE is included in the WT MODIFICATION REQUEST message for an E-RAB to be modified, the WT shall allocate respective resources as described in TS 36.300 [2].

For an E-RAB to be modified, the WT may include in the WT MODIFICATION REQUEST ACKNOWLEDGE message the *WT GTP Tunnel Endpoint* IE.

If the *Mobility Set* IE is included in the WT MODIFICATION REQUEST message, the WT shall use the information included in this IE as the WLAN Mobility Set configured for LWA, as defined in TS 36.300 [2].

8.9.3 Unsuccessful Operation

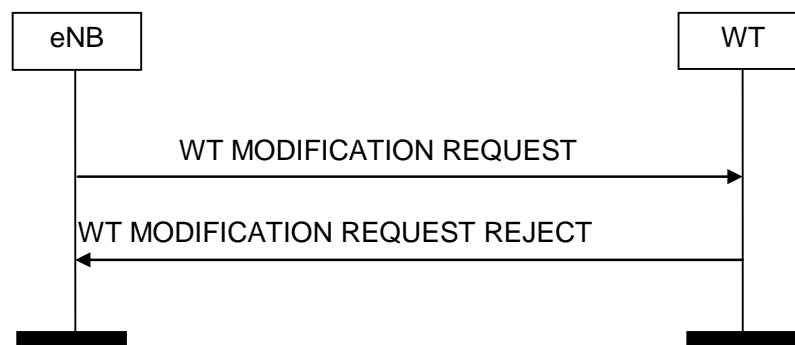


Figure 8.9.3-1: eNB initiated WT Modification, unsuccessful operation

If the WT does not admit any modification requested by the eNB, or a failure occurs during the eNB initiated WT Modification, the WT shall send the WT MODIFICATION REQUEST REJECT message to the eNB. The message shall contain the *Cause* IE with an appropriate value.

8.9.4 Abnormal Conditions

If the WT receives a WT MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE and/or the *E-RABs To Be Modified List* IE) set to the same value, the WT shall not admit the action requested for the corresponding E-RABs.

If the WT receives a WT MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RAB To Be Released List* IE) set to the same value, the WT shall initiate the release of one corresponding E-RAB and ignore the duplication of the instances of the selected corresponding E-RABs.

If the WT receives a WT MODIFICATION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the WT shall not admit the corresponding E-RAB.

Interaction with the WT initiated WT Modification procedure:

If the eNB, after having initiated the eNB initiated WT Modification procedure, receives the WT MODIFICATION REQUEST message, the eNB shall refuse the WT initiated WT Modification procedure with an appropriate cause value in the *Cause* IE.

8.10 WT Initiated WT Modification

8.10.1 General

This procedure is used by the WT to modify the UE context in the WT. In particular, in this Release of the specification, this procedure is used to request to the eNB the release of LWA bearers, or change their WT GTP Tunnel Endpoints.

The procedure uses UE-associated signalling.

8.10.2 Successful Operation

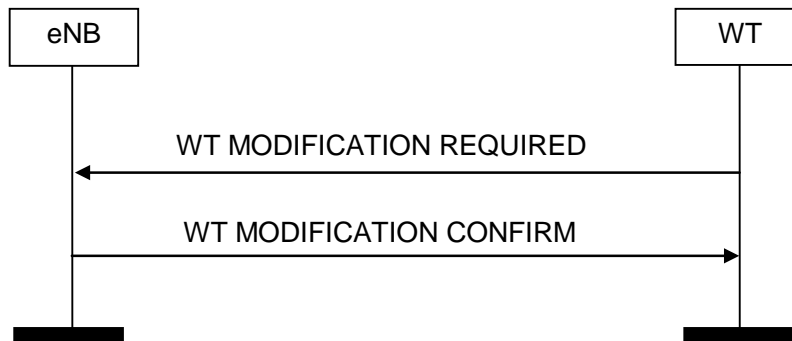


Figure 8.10.2-1: WT initiated WT Modification, successful operation

The WT initiates the procedure by sending the WT MODIFICATION REQUIRED message to the eNB.

The WT MODIFICATION REQUIRED message may contain

- E-RABs to be released within the *E-RABs To Be Released Item* IE;
- E-RABs to be modified within the *E-RABs To Be Modified Item* IE.

If the *WT GTP Tunnel Endpoint* IE is present in the *E-RABs To Be Modified Item* IE for a particular E-RAB, the eNB shall use this information to change the Xw transport bearer associated to the concerned E-RAB.

If the eNB is able to perform at least one of the modifications requested by the WT, the eNB shall send the WT MODIFICATION CONFIRM message to the WT with the appropriate information in the *E-RABs Confirmed To Be Released List* and/or *E-RABs Confirmed To Be Modified List* IEs. For each E-RAB to be released, if the *DL Forwarding GTP Tunnel Endpoint* IE is included within the *E-RABs Confirmed To Be Released Item* IE in the WT MODIFICATION CONFIRM message, the WT may perform data forwarding of downlink packets for that bearer.

8.10.3 Unsuccessful Operation

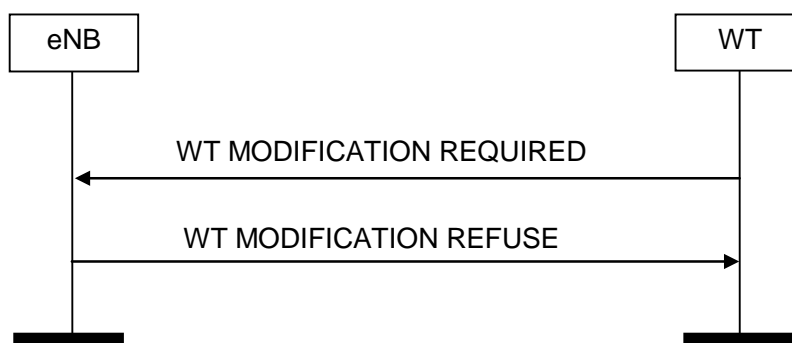


Figure 8.10.3-1: WT initiated WT Modification, unsuccessful operation

In case none of the requested modifications can be performed successfully the eNB shall respond with the WT MODIFICATION REFUSE message to the WT with an appropriate cause value in the *Cause* IE.

8.10.4 Abnormal Conditions

If the value received in the *E-RAB ID* IE of any of the *E-RABs To Be Released Item* IE or of the *E-RABs To Be Modified Item* IE is not known at the eNB, the eNB shall regard the procedure as failed and may take appropriate actions like triggering the eNB initiated WT Release procedure.

Interaction with the eNB initiated WT Modification Preparation procedure:

If the WT, after having initiated the WT initiated WT Modification procedure, receives the WT MODIFICATION REQUEST message, the WT shall

- regard the WT initiated WT Modification Procedure as failed,
- be prepared to receive the WT MODIFICATION REFUSE message from the eNB, and
- continue with the eNB initiated WT Modification procedure as specified in Section 8.9.

8.11 eNB Initiated WT Release

8.11.1 General

The eNB initiated WT Release procedure is triggered by the eNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

8.11.2 Successful Operation



Figure 8.11.2-1: eNB initiated WT Release, successful operation

The eNB initiates the procedure by sending the WT RELEASE REQUEST message. Upon reception of the WT RELEASE REQUEST message the WT shall stop providing user data to the UE. The eNB may provide appropriate information within the *Cause* IE.

For each E-RAB, if the *DL Forwarding GTP Tunnel Endpoint* IE is included within the *E-RABs To Be Released Item* IE in the WT RELEASE REQUEST message, the WT may perform data forwarding of downlink packets for that bearer.

8.11.3 Unsuccessful Operation

Not applicable.

8.11.4 Abnormal Conditions

Not applicable.

8.12 WT Initiated WT Release

8.12.1 General

This procedure is triggered by the WT to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

8.12.2 Successful Operation

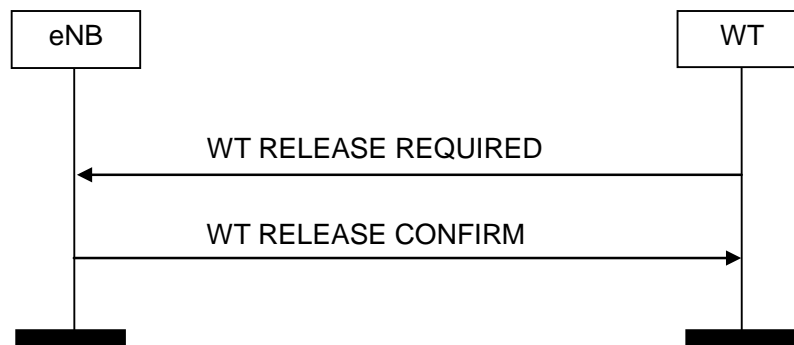


Figure 8.12.2-1: WT initiated WT Release, successful operation

The WT initiates the procedure by sending the WT RELEASE REQUIRED message to the eNB.

Upon reception of the WT RELEASE REQUIRED message, the eNB replies with the WT RELEASE CONFIRM message. For each E-RAB, if the *DL Forwarding GTP Tunnel Endpoint IE* is included within the *E-RABs To Be Released Item IE* in the WT RELEASE CONFIRM message, the WT may perform data forwarding of downlink packets for that bearer.

The WT may start data forwarding and stop providing user data to the UE upon reception of the WT RELEASE CONFIRM message.

8.12.3 Unsuccessful Operation

Not applicable.

8.12.4 Abnormal Conditions

Not applicable.

8.13 WT Association Confirmation

8.13.1 General

This procedure is initiated by the WT to give confirmation to the eNB that a certain UE successfully associated with the WLAN following a successful WT Addition Preparation procedure.

The procedure uses UE-associated signalling.

8.13.2 Successful Operation



Figure 8.13.2-1: WT Association Confirm procedure, successful operation

The WT initiates the procedure by sending the WT ASSOCIATION CONFIRMATION message to the eNB.

Upon reception of the WT ASSOCIATION CONFIRMATION message, the eNB shall consider that the UE is associated with the WLAN, and that user plane data for that UE may be sent to the WT.

8.13.3 Unsuccessful Operation

Not applicable.

8.13.4 Abnormal Conditions

Not applicable.

9 Elements for XwAP Communication

9.0 General

Sub clauses 9.1 and 9.2 describe the structure of the messages and information elements required for the XwAP protocol in tabular format. Sub clause 9.3 provides the corresponding ASN.1 definition.

The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 36.413 [8].

NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [12].

9.1 Message Functional Definition and Content

9.1.1 Xw SETUP REQUEST

This message is sent by an eNB to a WT to transfer the initialization information for a TNL association.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Global eNB ID	M		9.2.2		YES	reject

9.1.2 Xw SETUP RESPONSE

This message is sent by a WT to a requesting eNB to transfer the initialization information for a TNL association.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
WT ID	M		9.2.6		YES	reject
WLAN Identifier List		1		List of identifiers supported by the WT	YES	reject
>WLAN Identifier Item		1..<maxnoofWLANIdentifierItems>				
>>WLAN Information	M		9.2.7			
Criticality Diagnostics	O		9.2.5		YES	ignore

Range bound	Explanation
maxnoofWLANIdentifierItems	Maximum number of WLAN Identifier Items. The value is 4096.

9.1.3 Xw SETUP FAILURE

This message is sent by the WT to indicate Xw Setup failure.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Cause	M		9.2.4		YES	ignore
Criticality Diagnostics	O		9.2.5		YES	ignore

9.1.4 WT CONFIGURATION UPDATE

This message is sent by a WT to an eNB to transfer updated information for a TNL association.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
WLAN Identifiers To Add List		0..1		List of identifiers added by the WT	GLOBAL	reject
>WLAN Identifiers To Add Item		1..<maxnoofWLANIdentifierItems>				
>>WLAN Information	M		9.2.7			
WLAN Identifiers To Modify List		0..1		List of identifiers modified by the WT	GLOBAL	reject
>WLAN Identifiers To Modify Item		1..<maxnoofWLANIdentifierItems>				
>>WLAN Information	M		9.2.7			
WLAN Identifiers To Delete List		0..1		List of identifiers deleted by the WT	GLOBAL	reject
>WLAN Identifiers To Delete Item		1..<maxnoofWLANIdentifierItems>				
>>Old BSSID	M		BSSID 9.2.8			
WLAN Identifiers To Delete Extension List		0..1		List of identifiers deleted by the WT	GLOBAL	reject
>WLAN Identifiers To Delete extension Item		1..<maxnoofWLANIdentifierItems>				
>>Old SSID	O		SSID 9.2.9			
>>Old HESSID	O		HESSID 9.2.10			

Range bound	Explanation
maxnoofWLANIdentifierItems	Maximum number of WLAN Identifier Items. The value is 4096.

9.1.5 WT CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by an eNB to a WT to acknowledge update of information for a TNL association.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Criticality Diagnostics	O		9.2.5		YES	ignore

9.1.6 WT CONFIGURATION UPDATE FAILURE

This message is sent by an eNB to a WT to indicate WT Configuration Update Failure.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Cause	M		9.2.4		YES	ignore
Criticality Diagnostics	O		9.2.5		YES	ignore

9.1.7 WT STATUS REQUEST

This message is sent by an eNB to a WT to initiate the requested measurement according to the parameters given in the message.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB Measurement ID	M		INTEGER (1..4095,...)	Allocated by the eNB	YES	reject
WT Measurement ID	C- ifRegistrati onRequest Stop		INTEGER (1..4095,...)	Allocated by the WT	YES	ignore
Registration Request	M		ENUMERAT ED(start, stop, ...)	A value set to “stop”, indicates a request to stop all BSS measurements.	YES	reject
Report Characteristics	O		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object the WT is requested to report. First Bit = BSS Load, Second Bit = WAN Metrics, Third bit = Available Channel Utilization. Other bits shall be ignored by the WT.	YES	reject
BSS To Report List		1		List of BSSs for which measurement is needed	YES	ignore
>BSS To Report Item		1 .. <maxnoofBSSs>			EACH	ignore
>>BSSID	M		9.2.8		–	–
Reporting Periodicity	O		ENUMERAT ED(10ms, 50ms, 100ms, 200ms, 500ms, 1s, 5s, 10s, ...)		YES	ignore
Partial Success Indicator	O		ENUMERAT ED(partial success allowed, ...)	Included if partial success is allowed	YES	ignore

Range bound	Explanation
maxnoofBSSs	Maximum number of BSS Items in a list. The value is 4096.

Condition	Explanation
ifRegistrationRequestStop	This IE shall be present if the <i>Registration Request</i> IE is set to the value “stop”.

9.1.8 WT STATUS RESPONSE

This message is sent by the WT to indicate that the requested measurement, for all or for a subset of the measurement objects included in the measurement request, is successfully initiated.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB Measurement ID	M		INTEGER (1..4095,...)	Allocated by the eNB	YES	reject
WT Measurement ID	M		INTEGER (1..4095,...)	Allocated by the WT	YES	reject
Measurement Initiation Result List		0..1		List of all BSSs in which measurement objects were requested, included when indicating partial success	YES	ignore
>Measurement Initiation Result Item		1 .. <maxnoofBSSs>			EACH	ignore
>>BSSID	M		9.2.8		–	–
>>Measurement Failure Cause List		0..1		Indicates that WT could not initiate the measurement for at least one of the requested measurement objects in the BSS	–	–
>>>Measurement Failure Cause Item		1 .. <maxnoofFailed MeasObjects>			EACH	ignore
>>>>Measurement Failed Report Characteristics	M		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object that failed to be initiated in the WT. First Bit = BSS Load, Second Bit = WAN Metrics, Third Bit = Available Channel Utilization. Other bits shall be ignored by the eNB.	–	–
>>>>Cause	M		9.2.4	Failure cause for measurement objects for which the measurement cannot be initiated	–	–
Criticality Diagnostics	O		9.2.5		YES	ignore

Range bound	Explanation
maxnoofBSSs	Maximum number of BSSs Items in a list. The value is 4096.
maxnoofFailedMeasObjects	Maximum number of measurement objects that can fail per measurement. Value is 32.

9.1.9 WT STATUS FAILURE

This message is sent by the WT to indicate that none of the requested measurements can be initiated.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB Measurement ID	M		INTEGER (1..4095,...)	Allocated by the eNB	YES	reject
WT Measurement ID	M		INTEGER (1..4095,...)	Allocated by the WT	YES	reject
Complete Failure Cause Information List		0..1		Complete list of failure causes for all requested cells	YES	ignore
>Complete Failure Cause Information Item		1 .. <maxnoofBSSs>			EACH	ignore
>>BSSID	M		9.2.8		–	–
>>>Measurement Failure Cause List		1			–	–
>>>>Measurement Failure Cause Item		1 .. <maxnoofFailed MeasObjects>			EACH	ignore
>>>>>Measurement Failed Report Characteristics	M		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object that failed to be initiated in the WT. First Bit = BSS Load, Second Bit = WAN Metrics, Third Bit = Available Channel Utilization. Other bits shall be ignored by the eNB.	–	–
>>>>>Cause	M		9.2.4	Failure cause for measurements that cannot be initiated	–	–
Cause	M		9.2.4	Ignored by the receiver when the <i>Complete Failure Cause Information</i> IE is included	YES	ignore
Criticality Diagnostics	O		9.2.5		YES	ignore

Range bound	Explanation
maxnoofBSSs	Maximum number of BSS Items in a list. The value is 4096.
maxnoofFailedMeasObjects	Maximum number of measurement objects that can fail per measurement. Value is 32.

9.1.10 WT STATUS REPORT

This message is sent by the WT to the eNB to report the results of the requested measurements.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	ignore
eNB Measurement ID	M		INTEGER (1..4095,...)	Allocated by the eNB	YES	reject
WT Measurement ID	M		INTEGER (1..4095,...)	Allocated by the WT	YES	reject
BSS Measurement Result List		1			YES	ignore
>BSS Measurement Result Item		1 .. <maxnoofBSSs>			EACH	ignore
>>BSSID	M		9.2.8			
>>BSS Load	O		9.2.11			
>>WAN Metrics	O		9.2.12			
>>Available Channel Utilization	O		9.2.26			

Range bound	Explanation
maxnoofBSSs	Maximum number of BSS Items in a list. The value is 4096.

9.1.11 ERROR INDICATION

This message is used to indicate that some error has been detected in the originating node.

Direction: eNB → WT and WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	ignore
eNB UE XwAP ID	O		UE XwAP ID 9.2.24	Assigned by the eNB	YES	ignore
WT UE XwAP ID	O		UE XwAP ID 9.2.24	Assigned by the WT	YES	ignore
Cause	O		9.2.4		YES	ignore
Criticality Diagnostics	O		9.2.5		YES	ignore

9.1.12 RESET

This message is used to request the Xw interface to be reset.

Direction: eNB → WT and WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Cause	M		9.2.4		YES	ignore

9.1.13 RESET RESPONSE

This message is sent as a response to a RESET message.

Direction: WT → eNB and eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Criticality Diagnostics	O		9.2.5		YES	ignore

9.1.14 WT ADDITION REQUEST

This message is sent by the eNB to the WT to request the preparation of resources for LTE-WLAN aggregation for a specific UE.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	reject
UE Identity	M		9.2.16		YES	reject
WLAN Security Information	O		9.2.27		YES	reject
Serving PLMN	O		PLMN Identity 9.2.3	The serving PLMN for the UE.	YES	ignore
E-RABs To Be Added List		<i>1</i>			YES	reject
>E-RABs To Be Added Item		<i>1 .. <maxnoof Bearers></i>			EACH	reject
>>E-RAB ID	M		9.2.18		–	–
>>E-RAB Level QoS Parameters	M		9.2.19	Includes necessary QoS parameters	–	–
>> eNB GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.22	Endpoint of the Xw transport bearer at the eNB	–	–
Mobility Set	M		9.2.28		YES	reject

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.15 WT ADDITION REQUEST ACKNOWLEDGE

This message is sent by the WT to confirm to the eNB about the WT addition preparation.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	ignore
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	ignore
E-RABs Admitted To Be Added List		1			YES	ignore
>E-RABs Admitted To Be Added Item		1 .. <maxnoof Bearers>			EACH	ignore
>>E-RAB ID	M		9.2.18		–	–
>>WT GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.22	Endpoint of the Xw transport bearer at the WT.	–	–
E-RABs Not Admitted List	O		E-RAB List 9.2.23	A value for <i>E-RAB ID</i> shall only be present once in <i>E-RABs Admitted List</i> IE and in <i>E-RABs Not Admitted List</i> IE.	YES	ignore
Criticality Diagnostics	O		9.2.5		YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.16 WT ADDITION REQUEST REJECT

This message is sent by the WT to inform the eNB that the WT Addition Preparation procedure has failed.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	ignore
Cause	M		9.2.4		YES	ignore
Criticality Diagnostics	O		9.2.5		YES	ignore

9.1.17 WT MODIFICATION REQUEST

This message is sent by the eNB to the WT to request the modification of WT resources for a specific UE.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	reject
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	reject
Cause	M		9.2.4		YES	ignore
Serving PLMN	O		PLMN Identity 9.2.3	The serving PLMN for the UE.	YES	ignore
UE Context Information		<i>0..1</i>			YES	reject
>WLAN Security Information	O		9.2.27			
>E-RABs To Be Added List		<i>0..1</i>			–	–
>>E-RABs To Be Added Item		<i>1 .. <maxnoof Bearers></i>			EACH	ignore
>>>E-RAB ID	M		9.2.18		–	–
>>>E-RAB Level QoS Parameters	M		9.2.19	Includes necessary QoS parameters	–	–
>>> eNB GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.22	Endpoint of the Xw transport bearer at the eNB	–	–
>E-RABs To Be Modified List		<i>0..1</i>			–	–
>>E-RABs To Be Modified Item		<i>1 .. <maxnoof Bearers></i>			EACH	ignore
>>>E-RAB ID	M		9.2.18		–	–
>>>E-RAB Level QoS Parameters	O		9.2.19	Includes QoS parameters to be modified	–	–
>>> eNB GTP Tunnel Endpoint	O		GTP Tunnel Endpoint 9.2.22	Endpoint of the Xw transport bearer at the eNB	–	–
>E-RABs To Be Released List		<i>0..1</i>			–	–
>>E-RABs To Be Released Item		<i>1 .. <maxnoof Bearers></i>			EACH	ignore
>>>E-RAB ID	M		9.2.18		–	–
>>>DL Forwarding GTP Tunnel Endpoint	O		GTP Tunnel Endpoint 9.2.22	Identifies the Xw transport bearer used for forwarding of DL PDUs	–	–
Mobility Set	O		9.2.28		YES	reject

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.18 WT MODIFICATION REQUEST ACKNOWLEDGE

This message is sent by the WT to the eNB to confirm the modification of the WT resources for a specific UE.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	ignore
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	ignore
E-RABs Admitted List		0..1			YES	ignore
>E-RABs Admitted To Be Added List		0..1			–	–
>>E-RABs Admitted To Be Added Item		1 .. <maxnoof Bearers>			EACH	ignore
>>>E-RAB ID	M		9.2.18		–	–
>>>WT GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.22	Endpoint of the Xw transport bearer at the WT.	–	–
>E-RABs Admitted To Be Modified List		0..1			–	–
>>E-RABs Admitted To Be Modified Item		1 .. <maxnoof Bearers>			EACH	ignore
>>>E-RAB ID	M		9.2.18		–	–
>>>WT GTP Tunnel Endpoint	O		GTP Tunnel Endpoint 9.2.22	Endpoint of the Xw transport bearer at the WT.	–	–
>E-RABs Admitted To Be Released List		0..1			–	–
>>E-RABs Admitted To Be Released Item		1 .. <maxnoof Bearers>			EACH	ignore
>>>E-RAB ID	M		9.2.18		–	–
E-RABs Not Admitted List	O		E-RAB List 9.2.23	A value for <i>E-RAB ID</i> shall only be present once in <i>E-RABs Admitted List</i> IE and in <i>E-RABs Not Admitted List</i> IE.	YES	ignore
Criticality Diagnostics	O		9.2.5		YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.19 WT MODIFICATION REQUEST REJECT

This message is sent by the WT to inform the eNB that the eNB initiated WT Modification procedure has failed.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	ignore
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	ignore
Cause	M		9.2.4		YES	ignore
Criticality Diagnostics	O		9.2.5		YES	ignore

9.1.20 WT MODIFICATION REQUIRED

This message is sent by the WT to the eNB to request the release or modification of LWA bearers for a specific UE.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	reject
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	reject
Cause	M		9.2.4		YES	ignore
E-RABs To Be Released List		0..1			YES	ignore
>E-RABs To Be Released Item		1 .. <maxnoof Bearers>			EACH	ignore
>>E-RAB ID	M		9.2.18		–	–
>>Cause	M		9.2.4		–	–
E-RABs To Be Modified List		0..1			–	–
>E-RABs To Be Modified Item		1 .. <maxnoof Bearers>			EACH	ignore
>>E-RAB ID	M		9.2.18		–	–
>>WT GTP Tunnel Endpoint	O		GTP Tunnel Endpoint 9.2.22	Endpoint of the Xw transport bearer at the WT	–	–

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.21 WT MODIFICATION CONFIRM

This message is sent by the eNB to inform the WT that the WT initiated WT Modification procedure was successful.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	ignore
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	ignore
E-RABs Confirmed To Be Released List		0..1			–	–
>E-RABs Confirmed To Be Released Item		1 .. <maxnoof Bearers>			EACH	ignore
>>E-RAB ID	M		9.2.18		–	–
>>DL Forwarding GTP Tunnel Endpoint	O		GTP Tunnel Endpoint 9.2.22	Identifies the Xw transport bearer used for forwarding of DL PDUs	–	–
E-RABs Confirmed To Be Modified List		0..1			–	–
>E-RABs Confirmed To Be Modified Item		1 .. <maxnoof Bearers>			EACH	ignore
>>E-RAB ID	M		9.2.18		–	–
Criticality Diagnostics	O		9.2.5		YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.22 WT MODIFICATION REFUSE

This message is sent by the eNB to inform the WT that the WT initiated WT Modification procedure has failed.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	ignore
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	ignore
Cause	M		9.2.4		YES	ignore
Criticality Diagnostics	O		9.2.5		YES	ignore

9.1.23 WT RELEASE REQUEST

This message is sent by the eNB to the WT to request the release of all resources for a specific UE at the WT.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	ignore
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	reject
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	reject
Cause	O		9.2.4		YES	ignore
E-RABs To Be Released List		0..1			YES	ignore
>E-RABs To Be Released Item		1 .. <maxnoof Bearers>			EACH	ignore
>>E-RAB ID	M		9.2.18		–	–
>>DL Forwarding GTP Tunnel Endpoint	O		GTP Tunnel Endpoint 9.2.22	Identifies the Xw transport bearer. used for forwarding of DL PDUs	–	–

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.24 WT RELEASE REQUIRED

This message is sent by the WT to request the release of all resources for a specific UE at the WT.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	reject
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	reject
Cause	M		9.2.4		YES	ignore

9.1.25 WT RELEASE CONFIRM

This message is sent by the eNB to confirm the release of all resources for a specific UE at the WT.

Direction: eNB → WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	ignore
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	ignore
E-RABs to be Released List		0..1			YES	ignore
>E-RABs To Be Released Item		1.. <maxnoof Bearers>			–	–
>>E-RAB ID	M		9.2.18		–	–
>>DL Forwarding GTP Tunnel Endpoint	O		GTP Tunnel Endpoint 9.2.22	Identifies the Xw transport bearer used for forwarding of DL PDUs	–	–
Criticality Diagnostics	O		9.2.5		YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.26 WT ASSOCIATION CONFIRMATION

This message is sent by the WT to the eNB to confirm that a certain UE successfully associated with the WLAN.

Direction: WT → eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	ignore
eNB UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the eNB	YES	ignore
WT UE XwAP ID	M		UE XwAP ID 9.2.24	Assigned by the WT	YES	ignore

9.2 Information Element definitions

9.2.0 General

When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information.

9.2.1 Message Type

This IE uniquely identifies the message being sent. It is mandatory for all messages.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	M		INTEGER (0..255)	
Type of Message	M		CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome, ...)	

9.2.2 Global eNB ID

This IE is used to globally identify an eNB (see TS 36.401 [9]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.3	
CHOICE <i>eNB ID</i>	M			
> <i>Macro eNB ID</i>				
>>Macro eNB ID	M		BIT STRING (20)	Equal to the <i>Macro eNB ID</i> IE contained in <i>Global eNB ID</i> IE as defined in sub clause 9.2.1.37 of TS 36.413 [8]..
> <i>Other eNB ID</i>				
>>Other eNB ID	M		Protocol IE Container	

9.2.3 PLMN Identity

This IE indicates the PLMN Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		OCTET STRING (SIZE(3))	<ul style="list-style-type: none"> - digits 0 to 9, encoded 0000 to 1001, - 1111 used as filler digit, two digits per octet, - bits 4 to 1 of octet n encoding digit 2n-1 - bits 8 to 5 of octet n encoding digit 2n <p>-The PLMN identity consists of 3 digits from MCC followed by either</p> <ul style="list-style-type: none"> -a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or -3 digits from MNC (in case of a 3 digit MNC).

9.2.4 Cause

The purpose of this IE is to indicate the reason for a particular event for the whole protocol.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cause Group	M			
>Radio Network Layer				
>>Radio Network Layer Cause	M		ENUMERATED (Unknown eNB UE XwAP ID, Unknown WT UE XwAP ID, Unknown Pair of UE XwAP ID, WLAN not Available, Security Failure, ReportCharacteristicsEmpty, ExistingMeasurement ID, Unknown Measurement ID, Measurement Temporarily not Available, Unspecified, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object, Reduce Load, Resource Optimisation, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Procedure cancelled, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, ..., No Report Periodicity)	
>Transport Layer				
>>Transport Layer Cause	M		ENUMERATED (Transport Resource Unavailable, Unspecified, ...)	
>Protocol				
>>Protocol Cause	M		ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Unspecified, Abstract Syntax Error (Falsely Constructed Message), ...)	
>Misc				
>>Miscellaneous Cause	M		ENUMERATED (Control Processing Overload, Hardware Failure, O&M Intervention, Not enough User Plane Processing Resources, Unspecified, ...)	

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the concerned capability is missing. On the other hand, "not available" cause values indicate that the concerned capability is present, but insufficient resources were available to perform the requested action.

Radio Network Layer cause	Meaning
WLAN not Available	The concerned WLAN is not available.
Unknown eNB UE XwAP ID	The action failed because the eNB UE XwAP ID is unknown.
Unknown WT UE XwAP ID	The action failed because the WT UE XwAP ID is unknown.
Unknown Pair of UE XwAP ID	The action failed because the pair of UE XwAP IDs is unknown.
Security Failure	The action is requested (or a previous request by the receiving node failed) due to a failure in security procedures.
ReportCharacteristicsEmpty	The action failed because there is no characteristic reported.
Existing Measurement ID	The action failed because Measurement ID is already used.
Unknown Measurement ID	The action failed because some eNB or WT Measurement ID is unknown.
Measurement Temporarily not Available	The WT can temporarily not provide the requested measurement object.
Multiple E-RAB ID Instances	The action failed because multiple instances of the same E-RAB had been provided to the WT.
Switch Off Ongoing	The reason for the action is an ongoing switch off i.e. either the sending node, or nodes whose actions the sending node triggers or monitors, will be switched off and not be available. It aids the receiving node in taking subsequent actions.
Not supported QCI value	The action failed because the requested QCI is not supported.
Unspecified	Sent when none of the above cause values applies but still the cause is Radio Network Layer related.
Measurement not Supported For The Object	At least one of the concerned BSS(s) does not support the requested measurement.
Reduce Load	The action is requested in order to reduce load in an element controlled by the sending node.
Resource Optimisation	The reason for requesting this action is to improve the load distribution.
Target not Allowed	Requested action towards the indicated target is not allowed for the UE in question.
No Radio Resources Available	The action failed because of insufficient radio resources in the requested node.
Invalid QoS combination	The action was failed because of invalid QoS combination.
Procedure cancelled	The sending node cancelled the procedure due to other urgent actions to be performed.
Radio Connection With UE Lost	The action is requested due to losing the radio connection to the UE.
Failure in the Radio Interface Procedure	Radio interface procedure has failed.
No Report Periodicity	The action failed because the periodicity is not defined.

Transport Network Layer cause	Meaning
Transport resource unavailable	The required transport resources are not available.
Unspecified	Sent when none of the above cause values applies but still the cause is Transport Network Layer related

Protocol cause	Meaning
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and the concerned criticality indicated "reject" (see sub clause 10.3 of TS 36.413 [8]).
Abstract Syntax Error (Ignore and Notify)	The received message included an abstract syntax error and the concerned criticality indicated "ignore and notify" (see sub clause 10.3 of TS 36.413 [8]).
Abstract Syntax Error (falsely constructed message)	The received message contained IEs or IE groups in wrong order or with too many occurrences (see sub clause 10.3 of TS 36.413 [8]).
Message not Compatible with Receiver State	The received message was not compatible with the receiver state (see sub clause 10.4 of TS 36.413 [8]).
Semantic Error	The received message included a semantic error (see sub clause 10.4 of TS 36.413 [8]).
Transfer Syntax Error	The received message included a transfer syntax error (see sub clause 10.2 of TS 36.413 [8]).
Unspecified	Sent when none of the above cause values applies but still the cause is Protocol related

Miscellaneous cause	Meaning
Control Processing Overload	eNB or WT control processing overload
Hardware Failure	eNB or WT hardware failure
Not enough User Plane Processing Resources	eNB or WT has insufficient user plane processing resources available.
O&M Intervention	Operation and Maintenance intervention
Unspecified	Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer or Protocol

9.2.5 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the eNB and the WT when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	O		INTEGER (0..255)	Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error.
Triggering Message	O		ENUMERATED(initiating message, successful outcome, unsuccessful outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure.
Procedure Criticality	O		ENUMERATED(reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
Information Element Criticality Diagnostics		<i>0..<maxnoofErrors></i>		
>IE Criticality	M		ENUMERATED(reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value "ignore" shall not be used.
>IE ID	M		INTEGER (0..65535)	The IE ID of the not understood or missing IE
>Type Of Error	M		ENUMERATED(not understood, missing, ...)	

Range bound	Explanation
maxnoofErrors	Maximum no. of IE errors allowed to be reported with a single message. The value for maxnoofErrors is 256.

9.2.6 WT ID

This IE is used to identify a WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE <i>WT ID Type</i>	M			
> <i>WT ID Type 1</i>				
>>PLMN ID	M		PLMN Identity 9.2.3	
>>Short WT ID	M		BIT STRING (24)	
> <i>WT ID Type 2</i>				
>>Long WT ID	M		BIT STRING (48)	

9.2.7 WLAN Information

This IE contains WLAN configuration information that an eNB may need for the Xw interface. It shall contain at least one of the *BSS Item*, the *SSID*, and/or the *HESSID* IEs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
BSS Item	O					
>BSSID	M		9.2.8			
>WLAN Operating Class	O		INTEGER (0..255)	Indicates the Operating Class of WLAN as defined in IEEE 802.11™ [11].		
>WLAN Country Code	O		ENUMERATED (unitedStates, europe, japan, global, ...)	Indicates the country code of WLAN as defined in IEEE 802.11™ [11].		
>Maximum Capacity	O		Bit Rate 9.2.17	The maximum supported data rate corresponding to this BSSID.		
>WLAN Band Information List		0..1				
>>WLAN Band Information Item		1..<maxno ofBands>			EACH	ignore
>>>WLAN Band Information			9.2.13			
SSID	O		9.2.9			
HESSID	O		9.2.10			

Range bound	Explanation
maxnoofBands	Maximum number of WLAN Band Information Items per BSSID. The value of maxnoofBands is 256.

9.2.8 BSSID

This IE contains the BSSID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
BSSID	M		OCTET STRING (SIZE(6))	Includes the BSSID field as defined in subclause 8.2.4.3.4 of IEEE 802.11™ [11].

9.2.9 SSID

This IE contains the SSID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SSID	M		OCTET STRING (SIZE(1..32))	Includes the SSID field as defined in subclause 8.4.2.2 of IEEE 802.11™ [11].

9.2.10 HESSID

This IE contains the HESSID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
HESSID	M		OCTET STRING (SIZE(6))	Includes the HESSID field as defined in subclause 8.4.2.94 of IEEE 802.11™ [11].

9.2.11 BSS Load

This IE contains the BSS Load.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Channel Utilization	M		9.2.14	Channel Utilization field of the BSS Load element defined in subclause 8.4.2.30 of IEEE 802.11™ [11].
Station Count	O		9.2.25	The <i>stationcount</i> field of the BSS Load element defined in subclause 8.4.2.30 of IEEE 802.11™ [11].

9.2.12 WAN Metrics

This IE contains the WAN Metrics.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
WAN Backhaul Rate DL	M		WLAN Backhaul Rate 9.2.15	Downlink Speed field of the WAN Metrics element defined in subclause 4.4 of Hotspot 2.0 (Release 2) [10]
WAN Backhaul Rate UL	M		WLAN Backhaul Rate 9.2.15	Uplink Speed field of the WAN Metrics element defined in subclause 4.4 of Hotspot 2.0 (Release 2) [10]
WAN Backhaul Load DL	M		Channel Utilization 9.2.14	Downlink Load field of the WAN Metrics element defined in subclause 4.4 of Hotspot 2.0 (Release 2) [10]
WAN Backhaul Load UL	M		Channel Utilization 9.2.14	Uplink Load field of the WAN Metrics element defined in subclause 4.4 of Hotspot 2.0 (Release 2) [10]

9.2.13 WLAN Band Information

This IE describes the WLAN band information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE <i>WLAN Band Information</i>				
> <i>Band</i>				
>>WLAN Band	M		ENUMERATED (band2dot4, band5, ...)	Indicates the band of the WLAN as defined in IEEE 802.11™ [11].
> <i>Channel Number</i>				
>>WLAN Channel Number	M		INTEGER (0..255)	Indicates the WLAN channel number as defined in IEEE 802.11™ [11].

9.2.14 Channel Utilization

This IE indicates the utilization level of a channel.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Channel Utilization	M		INTEGER (0..255)	

9.2.15 WLAN Backhaul Rate

This IE identifies a WLAN Backhaul Rate.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
WLAN Backhaul Rate	M		ENUMERATED (r0, r4, r8, r16, r32, r64, r128, r256, r512, r1024, r2048, r4096, r8192, r16384, r32768, r65536, r131072, r262144, r524288, r1048576, r2097152, r4194304, r8388608, r16777216, r33554432, r67108864, r134217728, r268435456, r536870912, r1073741824, r2147483648, r4294967296)	

9.2.16 UE Identity

This IE represents the WLAN MAC address of the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Identity	M		OCTET STRING (SIZE(6))	This corresponds to the WLAN MAC address of the UE

9.2.17 Bit Rate

This IE indicates the number of bits delivered within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR E-RAB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bit Rate	M		INTEGER (0..10,000,000,000)	The unit is: bit/s

9.2.18 E-RAB ID

This IE uniquely identifies an E-RAB for a UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
E-RAB ID	M		INTEGER (0..15, ...)	

9.2.19 E-RAB Level QoS Parameters

This IE defines the QoS to be applied to an E-RAB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
QCI	M		INTEGER (0..255)	QoS Class Identifier defined in TS 23.401 [14]. Logical range and coding specified in TS 23.203 [13].	–	–
Allocation and Retention Priority	M		9.2.20		–	–
GBR QoS Information	O		9.2.21	This IE applies to GBR bearers only and shall be ignored otherwise.	–	–

9.2.20 Allocation and Retention Priority

This IE specifies the relative importance compared to other E-RABs for allocation and retention of the E-UTRAN Radio Access Bearer.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Priority Level	M		INTEGER (0..15)	Desc.: This IE should be understood as “priority of allocation and retention” (see TS 23.401 [14]). Usage: Value 15 means “no priority”. Values between 1 and 14 are ordered in decreasing order of priority, i.e. 1 is the highest and 14 the lowest. Value 0 shall be treated as a logical error if received.
Pre-emption Capability	M		ENUMERATED(sh all not trigger pre-emption, may trigger pre-emption)	Descr.: This IE indicates the pre-emption capability of the request on other E-RABs Usage: The E-RAB shall not pre-empt other E-RABs or, the E-RAB may pre-empt other E-RABs The Pre-emption Capability indicator applies to the allocation of resources for an E-RAB and as such it provides the trigger to the pre-emption procedures/processes of the eNB.
Pre-emption Vulnerability	M		ENUMERATED(not pre-emptable, pre-emptable)	Desc.: This IE indicates the vulnerability of the E-RAB to pre-emption of other E-RABs. Usage: The E-RAB shall not be pre-empted by other E-RABs or the E-RAB may be pre-empted by other RABs. Pre-emption Vulnerability indicator applies for the entire duration of the E-RAB, unless modified, and as such indicates whether the E-RAB is a target of the pre-emption procedures/processes of the eNB.

9.2.21 GBR QoS Information

This IE indicates the maximum and guaranteed bit rates of a GBR E-RAB for downlink.

NOTE: The WT shall regard the *GBR QoS Information* IE as an E-RAB level parameter for E-RABs configured with the LWA bearer, although the bit rates signalled by the eNB are typically not equal to the bit rates signalled by the MME for that E-RAB (see TS 36.300 [2]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
E-RAB Maximum Bit Rate Downlink	M		Bit Rate 9.2.17	Maximum Bit Rate in DL (i.e. from EPC to E-UTRAN) for the bearer. Details in TS 23.401 [14].	–	–
E-RAB Guaranteed Bit Rate Downlink	M		Bit Rate 9.2.17	Guaranteed Bit Rate (provided that there is data to deliver) in DL (i.e. from EPC to E-UTRAN) for the bearer. Details in TS 23.401 [14].	–	–

9.2.22 GTP Tunnel Endpoint

The *GTP Tunnel Endpoint* IE identifies an Xw transport bearer associated to an E-RAB. It contains a Transport Layer Address and a GTP Tunnel Endpoint Identifier. The Transport Layer Address is an IP address to be used for the Xw user plane transport (see TS 36.464 [15]). The GTP Tunnel Endpoint Identifier is to be used for the user plane transport between the eNB and the WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Transport Layer Address	M		BIT STRING (1..160, ...)	For details on the Transport Layer Address, see TS 36.464 [15]	–	–
GTP TEID	M		OCTET STRING (4)	For details and range, see TS 29.281 [16]	–	–

9.2.23 E-RAB List

The IE contains a list of E-RAB identities with a cause value. It is used for example to indicate not admitted bearers.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
E-RAB List Item		<i>1..<maxnoofBearers></i>			EACH	ignore
>E-RAB ID	M		9.2.18		–	–
>Cause	M		9.2.4		–	–

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256.

9.2.24 UE XwAP ID

This information element uniquely identifies a UE over the Xw interface.

The eNB UE XwAP ID is allocated by the eNB, and the WT UE XwAP ID is allocated by the WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE XwAP ID	M		OCTET STRING (SIZE(3))	

9.2.25 Station Count

The *Station Count* IE indicates the total number of stations associated with the BSS.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Station Count	M		INTEGER (0..65535)	Defined in subclause 8.4.2.30 of IEEE 802.11™ [11]

9.2.26 Available Channel Utilization

The *Available Channel Utilization* IE indicates the amount of WLAN channel utilization time that is available for LWA services relative to the total channel busy time period, as defined in [11]. The available channel utilization should be measured and reported so that the minimum channel utilization time needed for existing services is reserved according to implementation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Capacity Value	M		INTEGER (0..100)	Value 0 shall indicate no available channel utilization time, and 100 shall indicate that all the channel utilization time is available. Available Channel Utilization should be measured on a linear scale.	-	-

9.2.27 WLAN Security Information

The *WLAN Security Information* IE is used to establish WLAN security as defined in TS 33.401 [17].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
WT Security Key	M		BIT STRING (SIZE(256))	The S-K _{WT} which is provided by the eNB, see TS 33.401 [17].

9.2.28 Mobility Set

The *Mobility Set* IE contains the mobility set configured for a UE, as defined in TS 36.300 [2]. It shall contain at least one of the *BSSID*, the *SSID*, and/or the *HESSID* IEs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Mobility Set Item		<i>1..<maxnoofMobilitySetItems></i>		
>BSSID	O		9.2.8	
>SSID	O		9.2.9	
>HESSID	O		9.2.10	

Range bound	Explanation
maxnoofMobilitySetItems	Maximum number of mobility set items in the Mobility Set. The value is 1024.

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.1 General

XwAP ASN.1 definition conforms to ITU-T Rec. X.680 [6] and ITU-T Rec. X.681 [7].

Sub clause 9.3 presents the Abstract Syntax of the XwAP protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this sub clause and the tabular format in sub clause 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, in which the tabular format shall take precedence.

The ASN.1 definition specifies the structure and content of XwAP messages. XwAP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct an XwAP message according to the PDU definitions module and with the following additional rules:

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list in which the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

NOTE: In the above, "IE" means an IE in the object set with an explicit ID. If one IE needs to appear more than once in one object set, then the different occurrences have different IE IDs.

If an XwAP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.

9.3.2 Usage of Private Message Mechanism for Non-standard Use

The private message mechanism for non-standard use may be used:

- for special operator (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor inter-operability.
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.3 Elementary Procedure Definitions

-- *****

```
--
-- Elementary Procedure definitions for XwAP
--
-- *****

XwAP-PDU-Descriptions {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) xwap (8) version1 (1) xwap-PDU-Descriptions (0)}

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules
--
-- *****

IMPORTS
    Criticality,
    ProcedureCode

FROM XwAP-CommonDataTypes

    ErrorIndication,
    PrivateMessage,
    Reset,
    ResetResponse,
    XwSetupRequest,
    XwSetupResponse,
    XwSetupFailure,
    WTAdditionRequest,
    WTAdditionRequestAcknowledge,
    WTAdditionRequestReject,
    WTAssociationConfirmation,
    WTConfigurationUpdate,
    WTConfigurationUpdateAcknowledge,
    WTConfigurationUpdateFailure,
    WTModificationRequest,
    WTModificationRequestAcknowledge,
    WTModificationRequestReject,
    WTModificationRequired,
    WTModificationConfirm,
    WTModificationRefuse,
    WTReleaseRequest,
    WTReleaseRequired,
    WTReleaseConfirm,
    WTStatusRequest,
    WTStatusResponse,
    WTStatusFailure,
    WTStatusReport
```

```

FROM XwAP-PDU-Contents

    id-eNBInitiatedWTModification,
    id-eNBInitiatedWTRelease,
    id-errorIndication,
    id-privateMessage,
    id-reset,
    id-xwSetup,
    id-wTAdditionPreparation,
    id-wTAssociationConfirmation,
    id-wTConfigurationUpdate,
    id-wTInitiatedWTModification,
    id-wTInitiatedWTRelease,
    id-wTStatusReporting,
    id-wTStatusReportingInitiation

FROM XwAP-Constants;

-- *****
--
-- Interface Elementary Procedure Class
--
-- *****

XWAP-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage
    &SuccessfulOutcome                OPTIONAL,
    &UnsuccessfulOutcome              OPTIONAL,
    &procedureCode                    ProcedureCode  UNIQUE,
    &criticality                       Criticality   DEFAULT ignore
}
WITH SYNTAX {
    INITIATING MESSAGE                &InitiatingMessage
    [SUCCESSFUL OUTCOME                &SuccessfulOutcome]
    [UNSUCCESSFUL OUTCOME              &UnsuccessfulOutcome]
    PROCEDURE CODE                     &procedureCode
    [CRITICALITY                       &criticality]
}

-- *****
--
-- Interface PDU Definition
--
-- *****

XwAP-PDU ::= CHOICE {
    initiatingMessage    InitiatingMessage,
    successfulOutcome    SuccessfulOutcome,
    unsuccessfulOutcome  UnsuccessfulOutcome,
    ...
}

```

```

InitiatingMessage ::= SEQUENCE {
    procedureCode    XWAP-ELEMENTARY-PROCEDURE.&procedureCode    ({XWAP-ELEMENTARY-PROCEDURES}),
    criticality      XWAP-ELEMENTARY-PROCEDURE.&criticality      ({XWAP-ELEMENTARY-PROCEDURES}@procedureCode}),
    value           XWAP-ELEMENTARY-PROCEDURE.&InitiatingMessage ({XWAP-ELEMENTARY-PROCEDURES}@procedureCode)}
}

SuccessfulOutcome ::= SEQUENCE {
    procedureCode    XWAP-ELEMENTARY-PROCEDURE.&procedureCode    ({XWAP-ELEMENTARY-PROCEDURES}),
    criticality      XWAP-ELEMENTARY-PROCEDURE.&criticality      ({XWAP-ELEMENTARY-PROCEDURES}@procedureCode}),
    value           XWAP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome ({XWAP-ELEMENTARY-PROCEDURES}@procedureCode)}
}

UnsuccessfulOutcome ::= SEQUENCE {
    procedureCode    XWAP-ELEMENTARY-PROCEDURE.&procedureCode    ({XWAP-ELEMENTARY-PROCEDURES}),
    criticality      XWAP-ELEMENTARY-PROCEDURE.&criticality      ({XWAP-ELEMENTARY-PROCEDURES}@procedureCode}),
    value           XWAP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome ({XWAP-ELEMENTARY-PROCEDURES}@procedureCode)}
}

-- *****
--
-- Interface Elementary Procedure List
--
-- *****

XWAP-ELEMENTARY-PROCEDURES XWAP-ELEMENTARY-PROCEDURE ::= {
    XWAP-ELEMENTARY-PROCEDURES-CLASS-1 |
    XWAP-ELEMENTARY-PROCEDURES-CLASS-2,
    ...
}

XWAP-ELEMENTARY-PROCEDURES-CLASS-1 XWAP-ELEMENTARY-PROCEDURE ::= {
    xwSetup |
    wTConfigurationUpdate |
    wTStatusReportingInitiation |
    reset |
    wTAdditionPreparation |
    eNBInitiatedWTModification |
    wTInitiatedWTModification |
    wTInitiatedWTRelease |
    ...
}

XWAP-ELEMENTARY-PROCEDURES-CLASS-2 XWAP-ELEMENTARY-PROCEDURE ::= {
    wTStatusReporting |
    errorIndication |
    eNBInitiatedWTRelease |
    wTAssociationConfirmation |
    privateMessage |
    ...
}

```

```

-- *****
--
-- Interface Elementary Procedures
--
-- *****

xwSetup                XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE    XwSetupRequest
    SUCCESSFUL OUTCOME    XwSetupResponse
    UNSUCCESSFUL OUTCOME XwSetupFailure
    PROCEDURE CODE        id-xwSetup
    CRITICALITY            reject
}

wTConfigurationUpdate  XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE    WTConfigurationUpdate
    SUCCESSFUL OUTCOME    WTConfigurationUpdateAcknowledge
    UNSUCCESSFUL OUTCOME WTConfigurationUpdateFailure
    PROCEDURE CODE        id-wTConfigurationUpdate
    CRITICALITY            reject
}

wTStatusReportingInitiation XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE    WTStatusRequest
    SUCCESSFUL OUTCOME    WTStatusResponse
    UNSUCCESSFUL OUTCOME WTStatusFailure
    PROCEDURE CODE        id-wTStatusReportingInitiation
    CRITICALITY            reject
}

wTStatusReporting      XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE    WTStatusReport
    PROCEDURE CODE        id-wTStatusReporting
    CRITICALITY            ignore
}

errorIndication        XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE    ErrorIndication
    PROCEDURE CODE        id-errorIndication
    CRITICALITY            ignore
}

reset                  XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE    Reset
    SUCCESSFUL OUTCOME    ResetResponse
    PROCEDURE CODE        id-reset
    CRITICALITY            reject
}

wTAdditionPreparation  XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE    WTAdditionRequest
    SUCCESSFUL OUTCOME    WTAdditionRequestAcknowledge

```

```
    UNSUCCESSFUL OUTCOME    WTAdditionRequestReject
    PROCEDURE CODE          id-wTAdditionPreparation
    CRITICALITY              reject
}

eNBInitiatedWTModification XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      WModificationRequest
    SUCCESSFUL OUTCOME      WModificationRequestAcknowledge
    UNSUCCESSFUL OUTCOME    WModificationRequestReject
    PROCEDURE CODE          id-eNBInitiatedWTModification
    CRITICALITY              reject
}

wTInitiatedWTModification  XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      WModificationRequired
    SUCCESSFUL OUTCOME      WModificationConfirm
    UNSUCCESSFUL OUTCOME    WModificationRefuse
    PROCEDURE CODE          id-wTInitiatedWTModification
    CRITICALITY              reject
}

eNBInitiatedWTRelease      XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      WReleaseRequest
    PROCEDURE CODE          id-eNBInitiatedWTRelease
    CRITICALITY              ignore
}

wTInitiatedWTRelease       XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      WReleaseRequired
    SUCCESSFUL OUTCOME      WReleaseConfirm
    PROCEDURE CODE          id-wTInitiatedWTRelease
    CRITICALITY              reject
}

wTAssociationConfirmation  XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      WAssociationConfirmation
    PROCEDURE CODE          id-wTAssociationConfirmation
    CRITICALITY              ignore
}

privateMessage             XWAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PrivateMessage
    PROCEDURE CODE          id-privateMessage
    CRITICALITY              ignore
}

END
```


9.3.4 PDU Definitions

```
-- *****
--
-- PDU definitions for XwAP.
--
-- *****

XwAP-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) xwap (8) version1 (1) xwap-PDU-Contents (1) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules.
--
-- *****

IMPORTS

    BSSMeasurementResult-List,
    BSSToReport-List,
    Cause,
    CompleteFailureCauseInformation-List,
    CriticalityDiagnostics,
    E-RAB-ID,
    E-RAB-List,
    E-RAB-QoS-Parameters,
    Global-ENB-ID,
    GTPtunnelEndpoint,
    Measurement-ID,
    MeasurementInitiationResult-List,
    MobilitySet,
    PartialSuccessIndicator,
    PLMN-Identity,
    Registration-Request,
    ReportCharacteristics,
    ReportingPeriodicity,
    UE-Identity,
    UE-XwAP-ID,
    WLANIdentifier-List,
    WLANIdentifiersToDelete-List,
    WLANIdentifiersToDeleteExtension-List,
    WLANSecurityInfo,
    WTID

FROM XwAP-IEs
```

```
PrivateIE-Container{},
ProtocolExtensionContainer{},
ProtocolIE-Container{},
ProtocolIE-ContainerList{},
ProtocolIE-ContainerPair{},
ProtocolIE-ContainerPairList{},
ProtocolIE-SingleContainer{},
XWAP-PRIVATE-IES,
XWAP-PROTOCOL-EXTENSION,
XWAP-PROTOCOL-IES,
XWAP-PROTOCOL-IES-PAIR
FROM XwAP-Containers
```

```
id-BSSMeasurementResult-List,
id-BSSToReport-List,
id-Cause,
id-CompleteFailureCauseInformation-List,
id-UE-ContextInformationWTModReq,
id-CriticalityDiagnostics,
id-ENB-Measurement-ID,
id-ENB-UE-XwAP-ID,
id-E-RABs-Admitted-ToBeAdded-Item,
id-E-RABs-Admitted-ToBeAdded-List,
id-E-RABs-Admitted-ToBeAdded-ModAckItem,
id-E-RABs-Admitted-ToBeAdded-ModAckList,
id-E-RABs-Admitted-ToBeModified-ModAckItem,
id-E-RABs-Admitted-ToBeModified-ModAckList,
id-E-RABs-Admitted-ToBeReleased-ModAckItem,
id-E-RABs-Admitted-ToBeReleased-ModAckList,
id-E-RABs-Confirmed-ToBeModified-ModReqdList,
id-E-RABs-Confirmed-ToBeModified-ModReqdItem,
id-E-RABs-Confirmed-ToBeReleased-ModReqdList,
id-E-RABs-Confirmed-ToBeReleased-ModReqdItem,
id-E-RABs-NotAdmitted-List,
id-E-RABs-ToBeAdded-Item,
id-E-RABs-ToBeAdded-List,
id-E-RABs-ToBeAdded-ModReqItem,
id-E-RABs-ToBeModified-ModReqItem,
id-E-RABs-ToBeModified-ModReqdList,
id-E-RABs-ToBeModified-ModReqdItem,
id-E-RABs-ToBeReleased-ModReqItem,
id-E-RABs-ToBeReleased-List-RelConf,
id-E-RABs-ToBeReleased-RelConfItem,
id-E-RABs-ToBeReleased-List-RelReq,
id-E-RABs-ToBeReleased-RelReqItem,
id-E-RABs-ToBeReleased-ModReqdList,
id-E-RABs-ToBeReleased-ModReqdItem,
id-Global-ENB-ID,
id-MeasurementInitiationResult-List,
id-MobilitySet,
id-PartialSuccessIndicator,
id-ServingPLMN,
```

```

    id-Registration-Request,
    id-ReportCharacteristics,
    id-ReportingPeriodicity,
    id-UE-Identity,
    id-WLANIdentifier-List,
    id-WLANIdentifiersToAdd-List,
    id-WLANIdentifiersToDelete-List,
    id-WLANIdentifiersToDeleteExtension-List,
    id-WLANIdentifiersToModify-List,
    id-WLANSecurityInfo,
    id-WTID,
    id-WT-Measurement-ID,
    id-WT-UE-XwAP-ID,

    maxnoofBearers
FROM XwAP-Constants;

-- *****
--
-- Xw SETUP ELEMENTARY PROCEDURE
--
-- *****

-- *****
--
-- Xw Setup Request
--
-- *****

XwSetupRequest ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container          { {XwSetupRequestIEs} },
    ...
}

XwSetupRequestIEs XWAP-PROTOCOL-IES ::= {
    { ID id-Global-ENB-ID  CRITICALITY reject  TYPE Global-ENB-ID  PRESENCE mandatory },
    ...
}

-- *****
--
-- Xw Setup Response
--
-- *****

XwSetupResponse ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container          { {XwSetupResponseIEs} },
    ...
}

XwSetupResponseIEs XWAP-PROTOCOL-IES ::= {
    { ID id-WTID          CRITICALITY reject  TYPE WTID          PRESENCE mandatory}|

```

```

    { ID id-WLANIdentifier-List      CRITICALITY reject  TYPE WLANIdentifier-List      PRESENCE mandatory}|
    { ID id-CriticalityDiagnostics  CRITICALITY ignore  TYPE CriticalityDiagnostics  PRESENCE optional},
    ...
}

-- *****
--
-- Xw Setup Failure
--
-- *****

XwSetupFailure ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { {XwSetupFailureIEs} },
    ...
}

XwSetupFailureIEs XWAP-PROTOCOL-IES ::= {
    { ID id-Cause          CRITICALITY ignore  TYPE Cause          PRESENCE mandatory}|
    { ID id-CriticalityDiagnostics  CRITICALITY ignore  TYPE CriticalityDiagnostics  PRESENCE optional},
    ...
}

-- *****
--
-- WT CONFIGURATION UPDATE ELEMENTARY PROCEDURE
--
-- *****

-- *****
--
-- WT Configuration Update
--
-- *****

WTConfigurationUpdate ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { {WTConfigurationUpdateIEs} },
    ...
}

WTConfigurationUpdateIEs XWAP-PROTOCOL-IES ::= {
    { ID id-WLANIdentifiersToAdd-List      CRITICALITY reject  TYPE WLANIdentifier-List      PRESENCE optional}|
    { ID id-WLANIdentifiersToModify-List   CRITICALITY reject  TYPE WLANIdentifier-List      PRESENCE optional}|
    { ID id-WLANIdentifiersToDelete-List   CRITICALITY reject  TYPE WLANIdentifiersToDelete-List  PRESENCE optional}|
    { ID id-WLANIdentifiersToDeleteExtension-List  CRITICALITY reject  TYPE WLANIdentifiersToDeleteExtension-List  PRESENCE optional},
    ...
}

-- *****
--
-- WT Configuration Update Acknowledge
--
-- *****

```

```

WTConfigurationUpdateAcknowledge ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    { {WTConfigurationUpdateAcknowledgeIEs} },
    ...
}

WTConfigurationUpdateAcknowledgeIEs XWAP-PROTOCOL-IES ::= {
    { ID id-CriticalityDiagnostics          CRITICALITY ignore  TYPE CriticalityDiagnostics PRESENCE optional},
    ...
}

-- *****
--
-- WT Configuration Update Failure
--
-- *****

WTConfigurationUpdateFailure ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    { {WTConfigurationUpdateFailureIEs} },
    ...
}

WTConfigurationUpdateFailureIEs XWAP-PROTOCOL-IES ::= {
    { ID id-Cause                          CRITICALITY ignore  TYPE Cause                PRESENCE mandatory}|
    { ID id-CriticalityDiagnostics          CRITICALITY ignore  TYPE CriticalityDiagnostics PRESENCE optional},
    ...
}

-- *****
--
-- WT STATUS REPORTING INITIATION ELEMENTARY PROCEDURE
--
-- *****

-- *****
--
-- WT Status Request
--
-- *****

WTStatusRequest ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    {{WTStatusRequest-IEs}},
    ...
}

WTStatusRequest-IEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-Measurement-ID              CRITICALITY reject  TYPE Measurement-ID        PRESENCE mandatory}|
    { ID id-WT-Measurement-ID               CRITICALITY ignore  TYPE Measurement-ID        PRESENCE conditional}|
-- The IE shall be present if the Registration Request IE is set to "Stop"--
    { ID id-Registration-Request            CRITICALITY reject  TYPE Registration-Request   PRESENCE mandatory}|
    { ID id-ReportCharacteristics           CRITICALITY reject  TYPE ReportCharacteristics   PRESENCE optional}|
    { ID id-BSSToReport-List                CRITICALITY ignore  TYPE BSSToReport-List       PRESENCE mandatory}|
    { ID id-ReportingPeriodicity            CRITICALITY ignore  TYPE ReportingPeriodicity    PRESENCE optional}|
}

```

```

    { ID id-PartialSuccessIndicator CRITICALITY ignore TYPE PartialSuccessIndicator PRESENCE optional},
    ...
}

-- *****
--
-- WT Status Response
--
-- *****

WTStatusResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{WTStatusResponse-IEs}},
    ...
}

WTStatusResponse-IEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-Measurement-ID          CRITICALITY reject TYPE Measurement-ID          PRESENCE mandatory}|
    { ID id-WT-Measurement-ID          CRITICALITY reject TYPE Measurement-ID          PRESENCE mandatory}|
    { ID id-MeasurementInitiationResult-List CRITICALITY ignore TYPE MeasurementInitiationResult-List PRESENCE optional}|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore TYPE CriticalityDiagnostics      PRESENCE optional},
    ...
}

-- *****
--
-- WT Status Failure
--
-- *****

WTStatusFailure ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{WTStatusFailure-IEs}},
    ...
}

WTStatusFailure-IEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-Measurement-ID          CRITICALITY reject TYPE Measurement-ID          PRESENCE mandatory}|
    { ID id-WT-Measurement-ID          CRITICALITY reject TYPE Measurement-ID          PRESENCE mandatory}|
    { ID id-CompleteFailureCauseInformation-List CRITICALITY ignore TYPE CompleteFailureCauseInformation-List PRESENCE optional}|
    { ID id-Cause                      CRITICALITY ignore TYPE Cause                      PRESENCE mandatory}|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore TYPE CriticalityDiagnostics      PRESENCE optional},
    ...
}

-- *****
--
-- WT STATUS REPORTING ELEMENTARY PROCEDURE
--
-- *****
--
-- WT Status Report
--

```

```

-- *****
WTStatusReport ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{WTStatusReport-IEs}},
    ...
}

WTStatusReport-IEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-Measurement-ID          CRITICALITY reject  TYPE Measurement-ID          PRESENCE mandatory}|
    { ID id-WT-Measurement-ID           CRITICALITY reject  TYPE Measurement-ID          PRESENCE mandatory}|
    { ID id-BSSMeasurementResult-List   CRITICALITY ignore  TYPE BSSMeasurementResult-List PRESENCE mandatory},
    ...
}

-- *****
--
-- ERROR INDICATION ELEMENTARY PROCEDURE
--
-- *****
--
-- Error Indication
--
-- *****

ErrorIndication ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{ErrorIndication-IEs}},
    ...
}

ErrorIndication-IEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-UE-XwAP-ID              CRITICALITY ignore  TYPE UE-XwAP-ID              PRESENCE optional}|
    { ID id-WT-UE-XwAP-ID               CRITICALITY ignore  TYPE UE-XwAP-ID              PRESENCE optional}|
    { ID id-Cause                        CRITICALITY ignore  TYPE Cause                    PRESENCE optional}|
    { ID id-CriticalityDiagnostics        CRITICALITY ignore  TYPE CriticalityDiagnostics   PRESENCE optional},
    ...
}

-- *****
--
-- RESET ELEMENTARY PROCEDURE
--
-- *****
--
-- Reset
--
-- *****

Reset ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{Reset-IEs}},

```

```

    ...
  }

Reset-IEs XWAP-PROTOCOL-IES ::= {
  { ID id-Cause          CRITICALITY ignore  TYPE Cause          PRESENCE mandatory},
  ...
}

-- *****
--
-- Reset Response
--
-- *****

ResetResponse ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container   {{ResetResponse-IEs}},
  ...
}

ResetResponse-IEs XWAP-PROTOCOL-IES ::= {
  { ID id-CriticalityDiagnostics  CRITICALITY ignore  TYPE CriticalityDiagnostics  PRESENCE optional},
  ...
}

-- *****
--
-- WT ADDITION PREPARATION ELEMENTARY PROCEDURE
--
-- *****

-- *****
--
-- WT Addition Request
--
-- *****

WTAdditionRequest ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container   { {WTAdditionRequestIEs} },
  ...
}

WTAdditionRequestIEs XWAP-PROTOCOL-IES ::= {
  { ID id-ENB-UE-XwAP-ID          CRITICALITY reject  TYPE UE-XwAP-ID          PRESENCE mandatory}|
  { ID id-UE-Identity             CRITICALITY reject  TYPE UE-Identity         PRESENCE mandatory}|
  { ID id-WLANSecurityInfo        CRITICALITY reject  TYPE WLANSecurityInfo    PRESENCE optional}|
  { ID id-ServingPLMN             CRITICALITY ignore  TYPE PLMN-Identity       PRESENCE optional}|
  { ID id-E-RABs-ToBeAdded-List   CRITICALITY reject  TYPE E-RABs-ToBeAdded-List PRESENCE mandatory}|
  { ID id-MobilitySet             CRITICALITY reject  TYPE MobilitySet          PRESENCE mandatory},
  ...
}

E-RABs-ToBeAdded-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-ToBeAdded-ItemIEs} }

```



```

E-RABs-ToBeAdded-ItemIES XWAP-PROTOCOL-IES ::= {
  { ID id-E-RABs-ToBeAdded-Item CRITICALITY reject TYPE E-RABs-ToBeAdded-Item PRESENCE mandatory},
  ...
}

E-RABs-ToBeAdded-Item ::= SEQUENCE {
  e-RAB-ID E-RAB-ID,
  e-RAB-QoS-Parameters E-RAB-QoS-Parameters,
  eNB-GTPTunnelEndpoint GTPTunnelEndpoint,
  iE-Extensions ProtocolExtensionContainer { {E-RABs-ToBeAdded-ItemExtIES} } OPTIONAL,
  ...
}

E-RABs-ToBeAdded-ItemExtIES XWAP-PROTOCOL-EXTENSION ::= {
  ...
}

-- *****
--
-- WT Addition Request Acknowledge
--
-- *****

WTAdditionRequestAcknowledge ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { { WTAdditionRequestAcknowledgeIES} },
  ...
}

WTAdditionRequestAcknowledgeIES XWAP-PROTOCOL-IES ::= {
  { ID id-ENB-UE-XwAP-ID CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory}|
  { ID id-WT-UE-XwAP-ID CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory}|
  { ID id-E-RABs-Admitted-ToBeAdded-List CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-List PRESENCE mandatory}|
  { ID id-E-RABs-NotAdmitted-List CRITICALITY ignore TYPE E-RAB-List PRESENCE optional}|
  { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional},
  ...
}

E-RABs-Admitted-ToBeAdded-List ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-Admitted-ToBeAdded-ItemIES} }

E-RABs-Admitted-ToBeAdded-ItemIES XWAP-PROTOCOL-IES ::= {
  { ID id-E-RABs-Admitted-ToBeAdded-Item CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-Item PRESENCE mandatory}
}

E-RABs-Admitted-ToBeAdded-Item ::= SEQUENCE {
  e-RAB-ID E-RAB-ID,
  wT-GTPTunnelEndpoint GTPTunnelEndpoint,
  iE-Extensions ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-ItemExtIES} } OPTIONAL,
  ...
}

E-RABs-Admitted-ToBeAdded-ItemExtIES XWAP-PROTOCOL-EXTENSION ::= {
  ...
}

```

```

}

-- *****
--
-- WT Addition Request Reject
--
-- *****

WTAdditionRequestReject ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container          { { WTAdditionRequestRejectIEs } },
    ...
}

WTAdditionRequestRejectIEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-UE-XwAP-ID          CRITICALITY ignore TYPE UE-XwAP-ID          PRESENCE mandatory } |
    { ID id-Cause                    CRITICALITY ignore TYPE Cause                PRESENCE mandatory } |
    { ID id-CriticalityDiagnostics  CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional },
    ...
}

-- *****
--
-- eNB INITIATED WT MODIFICATION ELEMENTARY PROCEDURE
--
-- *****

-- *****
--
-- WT Modification Request
--
-- *****

WTModificationRequest ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container          { { WTModificationRequestIEs } },
    ...
}

WTModificationRequestIEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-UE-XwAP-ID          CRITICALITY reject TYPE UE-XwAP-ID          PRESENCE mandatory } |
    { ID id-WT-UE-XwAP-ID          CRITICALITY reject TYPE UE-XwAP-ID          PRESENCE mandatory } |
    { ID id-Cause                    CRITICALITY ignore TYPE Cause                PRESENCE mandatory } |
    { ID id-ServingPLMN             CRITICALITY ignore TYPE PLMN-Identity    PRESENCE optional } |
    { ID id-UE-ContextInformationWTModReq CRITICALITY reject TYPE UE-ContextInformationWTModReq PRESENCE optional } |
    { ID id-MobilitySet             CRITICALITY reject TYPE MobilitySet        PRESENCE optional },
    ...
}

UE-ContextInformationWTModReq ::= SEQUENCE {
    wLANSecurityInfo          WLANSecurityInfo          OPTIONAL,
    e-RABs-ToBeAdded          E-RABs-ToBeAdded-List-ModReq    OPTIONAL,
    e-RABs-ToBeModified       E-RABs-ToBeModified-List-ModReq  OPTIONAL,

```

```

    e-RABs-ToBeReleased          E-RABs-ToBeReleased-List-ModReq    OPTIONAL,
    iE-Extensions                ProtocolExtensionContainer { { UE-ContextInformationWTModReqExtIEs } } OPTIONAL,
    ...
}

UE-ContextInformationWTModReqExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

E-RABs-ToBeAdded-List-ModReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-ToBeAdded-ModReqItemIEs} }

E-RABs-ToBeAdded-ModReqItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeAdded-ModReqItem CRITICALITY ignore TYPE E-RABs-ToBeAdded-ModReqItem PRESENCE mandatory},
    ...
}

E-RABs-ToBeAdded-ModReqItem ::= SEQUENCE {
    e-RAB-ID                    E-RAB-ID,
    e-RAB-QoS-Parameters        E-RAB-QoS-Parameters,
    eNB-GTPTunnelEndpoint       GTPtunnelEndpoint,
    iE-Extensions                ProtocolExtensionContainer { {E-RABs-ToBeAdded-ModReqItemExtIEs} } OPTIONAL,
    ...
}

E-RABs-ToBeAdded-ModReqItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

E-RABs-ToBeModified-List-ModReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-ToBeModified-ModReqItemIEs} }

E-RABs-ToBeModified-ModReqItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeModified-ModReqItem CRITICALITY ignore TYPE E-RABs-ToBeModified-ModReqItem PRESENCE mandatory},
    ...
}

E-RABs-ToBeModified-ModReqItem ::= SEQUENCE {
    e-RAB-ID                    E-RAB-ID,
    e-RAB-QoS-Parameters        E-RAB-QoS-Parameters    OPTIONAL,
    eNB-GTPTunnelEndpoint       GTPtunnelEndpoint    OPTIONAL,
    iE-Extensions                ProtocolExtensionContainer { {E-RABs-ToBeModified-ModReqItemExtIEs} } OPTIONAL,
    ...
}

E-RABs-ToBeModified-ModReqItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

E-RABs-ToBeReleased-List-ModReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-ToBeReleased-ModReqItemIEs} }

E-RABs-ToBeReleased-ModReqItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-ModReqItem CRITICALITY ignore TYPE E-RABs-ToBeReleased-ModReqItem PRESENCE mandatory},
    ...
}

```

```

E-RABs-ToBeReleased-ModReqItem ::= SEQUENCE {
    e-RAB-ID                E-RAB-ID,
    dL-GTPTunnelEndpoint    GTPTunnelEndpoint OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModReqItemExtIEs} } OPTIONAL,
    ...
}

E-RABs-ToBeReleased-ModReqItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- WT Modification Request Acknowledge
--
-- *****

WTModificationRequestAcknowledge ::= SEQUENCE {
    protocolIEs           ProtocolIE-Container   { { WTModificationRequestAcknowledgeIEs } },
    ...
}

WTModificationRequestAcknowledgeIEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-UE-XwAP-ID                CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory } |
    { ID id-WT-UE-XwAP-ID                  CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory } |
    { ID id-E-RABs-Admitted-ToBeAdded-ModAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-ModAckList PRESENCE optional } |
    { ID id-E-RABs-Admitted-ToBeModified-ModAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-ModAckList PRESENCE optional } |
    { ID id-E-RABs-Admitted-ToBeReleased-ModAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-ModAckList PRESENCE optional } |
    { ID id-E-RABs-NotAdmitted-List          CRITICALITY ignore TYPE E-RAB-List PRESENCE optional } |
    { ID id-CriticalityDiagnostics           CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional },
    ...
}

E-RABs-Admitted-ToBeAdded-ModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-Admitted-ToBeAdded-ModAckItemIEs} }

E-RABs-Admitted-ToBeAdded-ModAckItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeAdded-ModAckItem CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-ModAckItem PRESENCE mandatory }
}

E-RABs-Admitted-ToBeAdded-ModAckItem ::= SEQUENCE {
    e-RAB-ID                E-RAB-ID,
    wT-GTPTunnelEndpoint    GTPTunnelEndpoint,
    iE-Extensions           ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-ModAckItemExtIEs} } OPTIONAL,
    ...
}

E-RABs-Admitted-ToBeAdded-ModAckItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

E-RABs-Admitted-ToBeModified-ModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-Admitted-ToBeModified-ModAckItemIEs} }

E-RABs-Admitted-ToBeModified-ModAckItemIEs XWAP-PROTOCOL-IES ::= {
  { ID id-E-RABs-Admitted-ToBeModified-ModAckItem      CRITICALITY ignore  TYPE E-RABs-Admitted-ToBeModified-ModAckItem  PRESENCE mandatory}
}

E-RABs-Admitted-ToBeModified-ModAckItem ::= SEQUENCE {
  e-RAB-ID                E-RAB-ID,
  wT-GTPTunnelEndpoint    GTPTunnelEndpoint                               OPTIONAL,
  iE-Extensions           ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-ModAckItemExtIEs} } OPTIONAL,
  ...
}

E-RABs-Admitted-ToBeModified-ModAckItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
  ...
}

E-RABs-Admitted-ToBeReleased-ModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-Admitted-ToBeReleased-ModAckItemIEs} }

E-RABs-Admitted-ToBeReleased-ModAckItemIEs XWAP-PROTOCOL-IES ::= {
  { ID id-E-RABs-Admitted-ToBeReleased-ModAckItem      CRITICALITY ignore  TYPE E-RABs-Admitted-ToBeReleased-ModAckItem  PRESENCE mandatory}
}

E-RABs-Admitted-ToBeReleased-ModAckItem ::= SEQUENCE {
  e-RAB-ID                E-RAB-ID,
  iE-Extensions           ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-ModAckItemExtIEs} } OPTIONAL,
  ...
}

E-RABs-Admitted-ToBeReleased-ModAckItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
  ...
}

-- *****
--
-- WT Modification Request Reject
--
-- *****

WTModificationRequestReject ::= SEQUENCE {
  protocolIEs           ProtocolIE-Container      { { WTModificationRequestRejectIEs } },
  ...
}

WTModificationRequestRejectIEs XWAP-PROTOCOL-IES ::= {
  { ID id-ENB-UE-XwAP-ID      CRITICALITY ignore  TYPE UE-XwAP-ID      PRESENCE mandatory}|
  { ID id-WT-UE-XwAP-ID      CRITICALITY ignore  TYPE UE-XwAP-ID      PRESENCE mandatory}|
  { ID id-Cause               CRITICALITY ignore  TYPE Cause           PRESENCE mandatory}|
  { ID id-CriticalityDiagnostics CRITICALITY ignore  TYPE CriticalityDiagnostics PRESENCE optional},
  ...
}

```

```

}
-- *****
--
-- WT INITIATED WT MODIFICATION ELEMENTARY PROCEDURE
--
-- *****
--
-- *****
--
-- WT Modification Required
--
-- *****

WTModificationRequired ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { { WTModificationRequiredIEs } },
    ...
}

WTModificationRequiredIEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-UE-XwAP-ID          CRITICALITY reject  TYPE UE-XwAP-ID          PRESENCE mandatory } |
    { ID id-WT-UE-XwAP-ID          CRITICALITY reject  TYPE UE-XwAP-ID          PRESENCE mandatory } |
    { ID id-Cause                   CRITICALITY ignore  TYPE Cause                PRESENCE mandatory } |
    { ID id-E-RABS-ToBeReleased-ModReqdList CRITICALITY ignore  TYPE E-RABS-ToBeReleased-ModReqdList PRESENCE optional } |
    { ID id-E-RABS-ToBeModified-ModReqdList CRITICALITY ignore  TYPE E-RABS-ToBeModified-ModReqdList PRESENCE optional },
    ...
}

E-RABS-ToBeReleased-ModReqdList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABS-ToBeReleased-ModReqdItemIEs} }

E-RABS-ToBeReleased-ModReqdItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RABS-ToBeReleased-ModReqdItem CRITICALITY ignore  TYPE E-RABS-ToBeReleased-ModReqdItem PRESENCE mandatory },
    ...
}

E-RABS-ToBeReleased-ModReqdItem ::= SEQUENCE {
    e-RAB-ID          E-RAB-ID,
    cause             Cause,
    iE-Extensions    ProtocolExtensionContainer { {E-RABS-ToBeReleased-ModReqdItemExtIEs} } OPTIONAL,
    ...
}

E-RABS-ToBeReleased-ModReqdItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

E-RABS-ToBeModified-ModReqdList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABS-ToBeModified-ModReqdItemIEs} }

E-RABS-ToBeModified-ModReqdItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RABS-ToBeModified-ModReqdItem CRITICALITY ignore  TYPE E-RABS-ToBeModified-ModReqdItem PRESENCE mandatory },
    ...
}

```

```

E-RABs-ToBeModified-ModReqdItem ::= SEQUENCE {
    e-RAB-ID                E-RAB-ID,
    wT-GTPTunnelEndpoint    GTPTunnelEndpoint OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { {E-RABs-ToBeModified-ModReqdItemExtIEs} } OPTIONAL,
    ...
}

E-RABs-ToBeModified-ModReqdItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- WT Modification Confirm
--
-- *****

WTModificationConfirm ::= SEQUENCE {
    protocolIEs           ProtocolIE-Container      { { WTModificationConfirmIEs} },
    ...
}

WTModificationConfirmIEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-UE-XwAP-ID                CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory} |
    { ID id-WT-UE-XwAP-ID                CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory} |
    { ID id-E-RABs-Confirmed-ToBeReleased-ModReqdList CRITICALITY ignore TYPE E-RABs-Confirmed-ToBeReleased-ModReqdList PRESENCE optional} |
    { ID id-E-RABs-Confirmed-ToBeModified-ModReqdList CRITICALITY ignore TYPE E-RABs-Confirmed-ToBeModified-ModReqdList PRESENCE optional} |
    { ID id-CriticalityDiagnostics        CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional},
    ...
}

E-RABs-Confirmed-ToBeReleased-ModReqdList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-Confirmed-ToBeReleased-ModReqdItemIEs} }

E-RABs-Confirmed-ToBeReleased-ModReqdItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Confirmed-ToBeReleased-ModReqdItem CRITICALITY ignore TYPE E-RABs-Confirmed-ToBeReleased-ModReqdItem PRESENCE mandatory},
    ...
}

E-RABs-Confirmed-ToBeReleased-ModReqdItem ::= SEQUENCE {
    e-RAB-ID                E-RAB-ID,
    dL-GTPTunnelEndpoint    GTPTunnelEndpoint OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { {E-RABs-Confirmed-ToBeReleased-ModReqdItemExtIEs} } OPTIONAL,
    ...
}

E-RABs-Confirmed-ToBeReleased-ModReqdItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

E-RABs-Confirmed-ToBeModified-ModReqdList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-Confirmed-ToBeModified-ModReqdItemIEs} }

```

```

E-RABs-Confirmed-ToBeModified-ModReqdItemIEs XWAP-PROTOCOL-IES ::= {
  { ID id-E-RABs-Confirmed-ToBeModified-ModReqdItem CRITICALITY ignore TYPE E-RABs-Confirmed-ToBeModified-ModReqdItem PRESENCE mandatory},
  ...
}

E-RABs-Confirmed-ToBeModified-ModReqdItem ::= SEQUENCE {
  e-RAB-ID E-RAB-ID,
  iE-Extensions ProtocolExtensionContainer { {E-RABs-Confirmed-ToBeModified-ModReqdItemExtIEs} } OPTIONAL,
  ...
}

E-RABs-Confirmed-ToBeModified-ModReqdItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
  ...
}

-- *****
--
-- WT Modification Refuse
--
-- *****

WTModificationRefuse ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { { WTModificationRefuseIEs} },
  ...
}

WTModificationRefuseIEs XWAP-PROTOCOL-IES ::= {
  { ID id-ENB-UE-XwAP-ID CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory}|
  { ID id-WT-UE-XwAP-ID CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory}|
  { ID id-Cause CRITICALITY ignore TYPE Cause PRESENCE mandatory}|
  { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional},
  ...
}

-- *****
--
-- eNB INITIATED WT RELEASE ELEMENTARY PROCEDURE
--
-- *****
--
-- WT Release Request
--
-- *****

WTReleaseRequest ::= SEQUENCE {
  protocolIEs ProtocolIE-Container {{ WTReleaseRequest-IEs}},
  ...
}

WTReleaseRequest-IEs XWAP-PROTOCOL-IES ::= {

```



```

    { ID id-ENB-UE-XwAP-ID          CRITICALITY reject TYPE UE-XwAP-ID          PRESENCE mandatory}|
    { ID id-WT-UE-XwAP-ID          CRITICALITY reject TYPE UE-XwAP-ID          PRESENCE mandatory}|
    { ID id-Cause                   CRITICALITY ignore TYPE Cause                PRESENCE optional}|
    { ID id-E-RABs-ToBeReleased-List-RelReq CRITICALITY ignore TYPE E-RABs-ToBeReleased-List-RelReq PRESENCE optional},
    ...
}

E-RABs-ToBeReleased-List-RelReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABs-ToBeReleased-RelReqItemIEs} }

E-RABs-ToBeReleased-RelReqItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-RelReqItem          CRITICALITY ignore TYPE E-RABs-ToBeReleased-RelReqItem          PRESENCE mandatory},
    ...
}

E-RABs-ToBeReleased-RelReqItem ::= SEQUENCE {
    e-RAB-ID                E-RAB-ID,
    wT-GTPTunnelEndpoint    GTPTunnelEndpoint OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelReqItemExtIEs} } OPTIONAL,
    ...
}

E-RABs-ToBeReleased-RelReqItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- WT INITIATED WT RELEASE ELEMENTARY PROCEDURE
--
-- *****

-- *****
--
-- WT Release Required
--
-- *****

WTReleaseRequired ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container          { { WTReleaseRequiredIEs } },
    ...
}

WTReleaseRequiredIEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-UE-XwAP-ID          CRITICALITY reject TYPE UE-XwAP-ID          PRESENCE mandatory}|
    { ID id-WT-UE-XwAP-ID          CRITICALITY reject TYPE UE-XwAP-ID          PRESENCE mandatory}|
    { ID id-Cause                   CRITICALITY ignore TYPE Cause                PRESENCE mandatory},
    ...
}

-- *****
--
-- WT Release Confirm

```

```

--
-- *****
WTReleaseConfirm ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container          { { WTReleaseConfirmIEs } },
    ...
}

WTReleaseConfirmIEs XWAP-PROTOCOL-IES ::= {
    { ID id-ENB-UE-XwAP-ID          CRITICALITY ignore TYPE UE-XwAP-ID          PRESENCE mandatory } |
    { ID id-WT-UE-XwAP-ID          CRITICALITY ignore TYPE UE-XwAP-ID          PRESENCE mandatory } |
    { ID id-E-RABS-ToBeReleased-List-RelConf CRITICALITY ignore TYPE E-RABS-ToBeReleased-List-RelConf PRESENCE optional } |
    { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional },
    ...
}

E-RABS-ToBeReleased-List-RelConf ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RABS-ToBeReleased-RelConfItemIEs} }

E-RABS-ToBeReleased-RelConfItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RABS-ToBeReleased-RelConfItem CRITICALITY ignore TYPE E-RABS-ToBeReleased-RelConfItem PRESENCE mandatory },
    ...
}

E-RABS-ToBeReleased-RelConfItem ::= SEQUENCE {
    e-RAB-ID          E-RAB-ID,
    wT-GTptunnelEndpoint GTptunnelEndpoint OPTIONAL,
    iE-Extensions     ProtocolExtensionContainer { {E-RABS-ToBeReleased-RelConfItemExtIEs} } OPTIONAL,
    ...
}

E-RABS-ToBeReleased-RelConfItemExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- WT ASSOCIATION CONFIRMATION ELEMENTARY PROCEDURE
--
-- *****
--
-- WT Association Confirmation
--
-- *****

WTAssociationConfirmation ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container          { {WTAssociationConfirmationIEs} },
    ...
}

WTAssociationConfirmationIEs XWAP-PROTOCOL-IES ::= {

```

```

    { ID id-ENB-UE-XwAP-ID CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory}|
    { ID id-WT-UE-XwAP-ID CRITICALITY ignore TYPE UE-XwAP-ID PRESENCE mandatory},
    ...
}

-- *****
--
-- PRIVATE MESSAGE
--
-- *****

PrivateMessage ::= SEQUENCE {
    privateIEs PrivateIE-Container {{PrivateMessage-IEs}},
    ...
}

PrivateMessage-IEs XWAP-PRIVATE-IES ::= {
    ...
}

END

```

9.3.5 Information Element definitions

```

-- *****
--
-- Information Element Definitions
--
-- *****

XwAP-IEs {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) xwap (8) version1 (1) xwap-IEs (2) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS
    id-BSSMeasurementResult-Item,
    id-BSSToReport-Item,
    id-E-RAB-Item,
    id-CompleteFailureCauseInformation-Item,
    id-MeasurementInitiationResult-Item,
    id-MeasurementFailureCause-Item,
    id-wLANBandInformation,
    id-WLANIdentifier-Item,
    id-WLANIdentifiersToDelete-Item,
    id-WLANIdentifiersToDeleteExtension-Item,

```

```
maxnoofBands,
maxnoofBearers,
maxnoofBSSs,
maxnoofErrors,
maxnoofFailedMeasObjects,
maxnoofMobilitySetItems,
maxnoofWLANIdentifierItems
FROM XwAP-Constants

Criticality,
ProcedureCode,
ProtocolIE-ID,
TriggeringMessage
FROM XwAP-CommonDataTypes

ProtocolExtensionContainer{ },
XWAP-PROTOCOL-EXTENSION,
ProtocolIE-SingleContainer{ },
XWAP-PROTOCOL-IES
FROM XwAP-Containers;

-- A

AllocationAndRetentionPriority ::= SEQUENCE {
    priorityLevel          PriorityLevel,
    pre-emptionCapability  Pre-emptionCapability,
    pre-emptionVulnerability Pre-emptionVulnerability,
    iE-Extensions          ProtocolExtensionContainer { {AllocationAndRetentionPriority-ExtIEs} } OPTIONAL,
    ...
}

AllocationAndRetentionPriority-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

AvailableChUtilization ::= SEQUENCE {
    capacityValue          CapacityValue,
    iE-Extensions          ProtocolExtensionContainer { { AvailableChUtilization-ExtIEs} } OPTIONAL,
    ...
}

AvailableChUtilization-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- B

BitRate ::= INTEGER (0..10000000000)

BSSID ::= OCTET STRING (SIZE(6))

BSSLoad ::= SEQUENCE {
```

```

    channelUtilization      ChannelUtilization,
    stationCount            StationCount      OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { {BSSLoad-Item-ExtIEs} }    OPTIONAL,
    ...
}

BSSLoad-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

BSS-Item ::= SEQUENCE {
    bSSID                  BSSID,
    wlanOperatingClass    wlanOperatingClass      OPTIONAL,
    wlanCountryCode       wlanCountryCode        OPTIONAL,
    maximumCapacity       BitRate                OPTIONAL,
    wlanBandInformationList wlanBandInformationList OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { {BSS-Item-ExtIEs} } OPTIONAL,
    ...
}

BSS-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

BSSMeasurementResult-List ::= SEQUENCE (SIZE (1..maxnoofBSSs)) OF ProtocolIE-SingleContainer { {BSSMeasurementResult-ItemIEs} }

BSSMeasurementResult-ItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-BSSMeasurementResult-Item    CRITICALITY ignore    TYPE BSSMeasurementResult-Item    PRESENCE mandatory},
    ...
}

BSSMeasurementResult-Item ::= SEQUENCE {
    bSSID                  BSSID,
    bSSLoad                BSSLoad                OPTIONAL,
    wanMetrics             wanMetrics             OPTIONAL,
    availableChUtilization AvailableChUtilization OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { {BSSMeasurementResult-Item-ExtIEs} }    OPTIONAL,
    ...
}

BSSMeasurementResult-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

BSSToReport-List ::= SEQUENCE (SIZE (1.. maxnoofBSSs)) OF ProtocolIE-SingleContainer { {BSSToReport-ItemIEs} }

BSSToReport-ItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-BSSToReport-Item    CRITICALITY ignore    TYPE BSSToReport-Item    PRESENCE mandatory}
}

BSSToReport-Item ::= SEQUENCE {
    bSSID                  BSSID,
    iE-Extensions          ProtocolExtensionContainer { {BSSToReport-Item-ExtIEs} }    OPTIONAL,

```

```
    ...
  }

BSSToReport-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
  ...
}

-- C

CapacityValue ::= INTEGER (0..100)

Cause ::= CHOICE {
  radioNetwork      CauseRadioNetwork,
  transport         CauseTransport,
  protocol          CauseProtocol,
  misc              CauseMisc,
  ...
}

CauseMisc ::= ENUMERATED {
  control-processing-overload,
  hardware-failure,
  om-intervention,
  not-enough-user-plane-processing-resources,
  unspecified,
  ...
}

CauseProtocol ::= ENUMERATED {
  transfer-syntax-error,
  abstract-syntax-error-reject,
  abstract-syntax-error-ignore-and-notify,
  message-not-compatible-with-receiver-state,
  semantic-error,
  unspecified,
  abstract-syntax-error-falsely-constructed-message,
  ...
}

CauseRadioNetwork ::= ENUMERATED {
  unknown-eNB-UE-XwAP-ID,
  unknown-WT-UE-XwAP-ID,
  unknown-pair-of-UE-XwAP-ID,
  wLAN-not-available,
  security-failure,
  reportCharacteristicsEmpty,
  existing-Measurement-ID,
  unknown-Measurement-ID,
  measurement-temporarily-not-available,
  unspecified,
  multiple-E-RAB-ID-instances,
  switch-off-ongoing,
}
```

```

    not-supported-QCI-value,
    measurement-not-supported-for-the-object,
    reduce-load,
    resource-optimisation,
    target-not-allowed,
    no-radio-resources-available,
    invalid-QoS-combination,
    procedure-cancelled,
    radio-connection-with-UE-lost,
    failure-in-the-radio-interface-procedure,
    ...,
    no-report-periodicity
}

CauseTransport ::= ENUMERATED {
    transport-resource-unavailable,
    unspecified,
    ...
}

ChannelUtilization ::= INTEGER (0..255)

CompleteFailureCauseInformation-List ::= SEQUENCE (SIZE (1..maxnoofBSSs)) OF ProtocolIE-SingleContainer { {CompleteFailureCauseInformation-ItemIEs} }

CompleteFailureCauseInformation-ItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-CompleteFailureCauseInformation-Item    CRITICALITY ignore    TYPE CompleteFailureCauseInformation-Item    PRESENCE mandatory}
}

CompleteFailureCauseInformation-Item ::= SEQUENCE {
    bSSID                                     BSSID,
    measurementFailureCause-List             MeasurementFailureCause-List,
    iE-Extensions                             ProtocolExtensionContainer { { CompleteFailureCauseInformation-Item-ExtIEs} } OPTIONAL,
    ...
}

CompleteFailureCauseInformation-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

CriticalityDiagnostics ::= SEQUENCE {
    procedureCode                             ProcedureCode                                     OPTIONAL,
    triggeringMessage                         TriggeringMessage                                OPTIONAL,
    procedureCriticality                       Criticality                                        OPTIONAL,
    iEsCriticalityDiagnostics                 CriticalityDiagnostics-IE-List                    OPTIONAL,
    iE-Extensions                             ProtocolExtensionContainer {{CriticalityDiagnostics-ExtIEs}} OPTIONAL,
    ...
}

CriticalityDiagnostics-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1.. maxnoofErrors)) OF CriticalityDiagnostics-IE-Item

CriticalityDiagnostics-IE-Item ::= SEQUENCE {
    iECriticality          Criticality,
    iE-ID                  ProtocolIE-ID,
    typeOfError            TypeOfError,
    iE-Extensions          ProtocolExtensionContainer {{CriticalityDiagnostics-IE-Item-ExtIEs}} OPTIONAL,
    ...
}

CriticalityDiagnostics-IE-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- E

ENB-ID ::= CHOICE {
    macroENB-ID           BIT STRING (SIZE(20)),
    otherENB-ID           ProtocolIE-SingleContainer { {OtherENB-IDIEs} },
    ...
}

E-RAB-ID ::= INTEGER (0..15, ...)

E-RAB-List ::= SEQUENCE (SIZE(1.. maxnoofBearers)) OF ProtocolIE-SingleContainer { {E-RAB-ItemIEs} }

E-RAB-ItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-E-RAB-Item  CRITICALITY ignore      TYPE E-RAB-Item      PRESENCE mandatory },
    ...
}

E-RAB-Item ::= SEQUENCE {
    e-RAB-ID              E-RAB-ID,
    cause                  Cause,
    iE-Extensions          ProtocolExtensionContainer { {E-RAB-Item-ExtIEs} } OPTIONAL,
    ...
}

E-RAB-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

E-RAB-QoS-Parameters ::= SEQUENCE {
    qCI                    QCI,
    allocationRetentionPriority AllocationAndRetentionPriority,
    gbrQosInformation      GBR-QosInformation OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { {E-RAB-QoS-Parameters-ExtIEs} } OPTIONAL,
    ...
}

E-RAB-QoS-Parameters-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

```



```

}

-- G

GBR-QoSInformation ::= SEQUENCE {
    e-RAB-MaximumBitrateDL      BitRate,
    e-RAB-GuaranteedBitrateDL   BitRate,
    iE-Extensions                ProtocolExtensionContainer { { GBR-QoSInformation-ExtIEs } } OPTIONAL,
    ...
}

GBR-QoSInformation-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

Global-ENB-ID ::= SEQUENCE {
    plMNIdentity                PLMN-Identity,
    eNB-ID                      ENB-ID,
    iE-Extensions                ProtocolExtensionContainer { { GlobalENB-ID-ExtIEs } } OPTIONAL,
    ...
}

GlobalENB-ID-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

GTPtunnelEndpoint ::= SEQUENCE {
    transportLayerAddress        TransportLayerAddress,
    gTP-TEID                    GTP-TEID,
    iE-Extensions                ProtocolExtensionContainer { { GTPtunnelEndpoint-ExtIEs } } OPTIONAL,
    ...
}

GTPtunnelEndpoint-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

GTP-TEID      ::= OCTET STRING (SIZE (4))

-- H

HESSID ::= OCTET STRING (SIZE(6))

-- M

Measurement-ID ::= INTEGER (1..4095, ...)

MeasurementInitiationResult-List ::= SEQUENCE (SIZE (1.. maxnoofBSSs)) OF ProtocolIE-SingleContainer { { MeasurementInitiationResult-ItemIEs } }

MeasurementInitiationResult-ItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-MeasurementInitiationResult-Item    CRITICALITY ignore    TYPE MeasurementInitiationResult-Item    PRESENCE mandatory}
}

```

```

MeasurementInitiationResult-Item ::= SEQUENCE {
    bSSID                BSSID,
    measurementFailureCause-List    MeasurementFailureCause-List    OPTIONAL,
    iE-Extensions        ProtocolExtensionContainer { { MeasurementInitiationResult-Item-ExtIEs } }    OPTIONAL,
    ...
}

MeasurementInitiationResult-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

MeasurementFailureCause-List ::= SEQUENCE (SIZE (1..maxnoofFailedMeasObjects)) OF ProtocolIE-SingleContainer { { MeasurementFailureCause-ItemIEs } }

MeasurementFailureCause-ItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-MeasurementFailureCause-Item    CRITICALITY ignore    TYPE MeasurementFailureCause-Item    PRESENCE mandatory}
}

MeasurementFailureCause-Item ::= SEQUENCE {
    measurementFailedReportCharacteristics    ReportCharacteristics,
    cause                                      Cause,
    iE-Extensions                            ProtocolExtensionContainer { { MeasurementFailureCause-Item-ExtIEs } }    OPTIONAL,
    ...
}

MeasurementFailureCause-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

MobilitySet ::= SEQUENCE (SIZE (1..maxnoofMobilitySetItems)) OF MobilitySetItem

MobilitySetItem ::= SEQUENCE {
    bSSID                BSSID                OPTIONAL,
    sSID                 SSID                 OPTIONAL,
    hESSID               HESSID               OPTIONAL,
    iE-Extensions        ProtocolExtensionContainer { { MobilitySetItem-ExtIEs } }    OPTIONAL,
    ...
}

MobilitySetItem-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- O
OtherENB-IDIEs XWAP-PROTOCOL-IES ::= {
    ...
}

-- P

PartialSuccessIndicator ::= ENUMERATED {
    partial-success-allowed, ...
}

```

```
PLMN-Identity ::= OCTET STRING (SIZE(3))

Pre-emptionCapability ::= ENUMERATED {
    shall-not-trigger-pre-emption,
    may-trigger-pre-emption
}

Pre-emptionVulnerability ::= ENUMERATED {
    not-pre-emptable,
    pre-emptable
}

PriorityLevel ::= INTEGER { spare (0), highest (1), lowest (14), no-priority (15) } (0..15)

-- Q

QCI ::= INTEGER (0..255)

-- R

Registration-Request ::= ENUMERATED {
    start,
    stop,
    ...
}

ReportCharacteristics ::= BIT STRING (SIZE (32))

ReportingPeriodicity ::= ENUMERATED {
    ms10, ms50, ms100, ms200, ms500, s1, s5, s10, ...
}

-- S

SSID ::= OCTET STRING (SIZE (1..32))

StationCount ::= INTEGER (0..65535)

-- T

TransportLayerAddress ::= BIT STRING (SIZE(1..160, ...))

TypeOfError ::= ENUMERATED {
    not-understood,
    missing,
    ...
}

-- U
```

```

UE-Identity ::= OCTET STRING (SIZE (6))

UE-XwAP-ID ::= OCTET STRING (SIZE (3))

-- W

WANMetrics ::= SEQUENCE {
    wAN-Backhaul-Rate-DL          WLAN-Backhaul-Rate,
    wAN-Backhaul-Rate-UL          WLAN-Backhaul-Rate,
    wANBackhaulLoad-DL           ChannelUtilization,
    wANBackhaulLoad-UL           ChannelUtilization,
    iE-Extensions                 ProtocolExtensionContainer { { WANMetrics-Item-ExtIEs} } OPTIONAL,
    ...
}

WANMetrics-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

WLAN-Backhaul-Rate ::= ENUMERATED {r0, r4, r8, r16, r32, r64, r128, r256, r512, r1024, r2048, r4096, r8192, r16384, r32768, r65536, r131072,
r262144, r524288, r1048576, r2097152, r4194304, r8388608, r16777216, r33554432, r67108864, r134217728, r268435456, r536870912, r1073741824,
r2147483648, r4294967296}

WLANband ::= ENUMERATED {band2dot4, band5, ...}

WLANBandInformationList ::= SEQUENCE (SIZE (1..maxnoofBands)) OF ProtocolIE-SingleContainer { { WLANBandInformation-ItemIEs} }

WLANBandInformation-ItemIEs XWAP-PROTOCOL-IES ::= {
    { ID id-wLANBandInformation    CRITICALITY ignore    TYPE WLANBandInformation    PRESENCE mandatory},
    ...
}

WLANBandInformation ::= CHOICE {
    band                WLANband,
    channelnumber        WLANchannelnumber,
    ...
}

WLANchannelnumber ::= INTEGER (0..255)

WLANOperatingClass ::= INTEGER (0..255)

WLANCountryCode ::= ENUMERATED {
    unitedStates,
    europe,
    japan,
    global,
    ...
}

WLANIdentifier-List ::= SEQUENCE (SIZE (1.. maxnoofWLANIdentifierItems)) OF ProtocolIE-SingleContainer { { WLANIdentifier-ItemIEs} }

```

```

WLANIdentifier-ItemIEs XWAP-PROTOCOL-IES ::= {
  { ID id-WLANIdentifier-Item CRITICALITY ignore TYPE WLANIdentifier-Item PRESENCE mandatory},
  ...
}

WLANIdentifier-Item ::= SEQUENCE {
  wlanInformation          WLANInformation,
  iE-Extensions            ProtocolExtensionContainer { { WLANIdentifier-Item-ExtIEs} } OPTIONAL,
  ...
}

WLANIdentifier-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
  ...
}

WLANIdentifiersToDelete-List ::= SEQUENCE (SIZE (1.. maxnoofWLANIdentifierItems)) OF ProtocolIE-SingleContainer { { WLANIdentifiersToDelete-ItemIEs} }

WLANIdentifiersToDelete-ItemIEs XWAP-PROTOCOL-IES ::= {
  { ID id-WLANIdentifiersToDelete-Item CRITICALITY ignore TYPE WLANIdentifiersToDelete-Item PRESENCE mandatory}
}

WLANIdentifiersToDelete-Item ::= SEQUENCE {
  bSSID                    BSSID,
  iE-Extensions            ProtocolExtensionContainer { { WLANIdentifiersToDelete-Item-ExtIEs} } OPTIONAL,
  ...
}

WLANIdentifiersToDelete-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
  ...
}

WLANIdentifiersToDeleteExtension-List ::= SEQUENCE (SIZE (1.. maxnoofWLANIdentifierItems)) OF ProtocolIE-SingleContainer
{ { WLANIdentifiersToDeleteExtension-ItemIEs} }

WLANIdentifiersToDeleteExtension-ItemIEs XWAP-PROTOCOL-IES ::= {
  { ID id-WLANIdentifiersToDeleteExtension-Item CRITICALITY ignore TYPE WLANIdentifiersToDeleteExtension-Item PRESENCE mandatory}
}

WLANIdentifiersToDeleteExtension-Item ::= SEQUENCE {
  sSID                      SSID          OPTIONAL,
  hESSID                     HESSID        OPTIONAL,
  iE-Extensions              ProtocolExtensionContainer { { WLANIdentifiersToDeleteExtension-Item-ExtIEs} } OPTIONAL,
  ...
}

WLANIdentifiersToDeleteExtension-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
  ...
}

WLANInformation ::= SEQUENCE {
  bSS-Item                   BSS-Item     OPTIONAL,
  sSID                       SSID        OPTIONAL,

```

```

    hESSID          HESSID          OPTIONAL,
    iE-Extensions  ProtocolExtensionContainer { { WLANInformation-ExtIEs} } OPTIONAL,
    ...
}

WLANInformation-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

WLANSecurityInfo ::= SEQUENCE {
    wT-Security-Key    BIT STRING (SIZE(256)),
    iE-Extensions      ProtocolExtensionContainer { { WLANSecurityInfo-Item-ExtIEs} } OPTIONAL,
    ...
}

WLANSecurityInfo-Item-ExtIEs XWAP-PROTOCOL-EXTENSION ::= {
    ...
}

WTID ::= CHOICE {
    wTID-Type1          WTID-Type1,
    wTID-Type2          WTID-Long-Type2,
    ...
}

WTID-Type1 ::= SEQUENCE {
    pLMN-Identity          PLMN-Identity,
    shortWTID              BIT STRING (SIZE(24)),
    ...
}

WTID-Long-Type2 ::= BIT STRING (SIZE(48))

END

```

9.3.6 Common definitions

```

-- *****
--
-- Common definitions
--
-- *****

XwAP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) xwap (8) version1 (1) xwap-CommonDataTypes (3) }

DEFINITIONS AUTOMATIC TAGS ::=

```

```

BEGIN
-- *****
--
-- IE parameter types from other modules.
--
-- *****

IMPORTS
    maxPrivateIEs,
    maxProtocolExtensions,
    maxProtocolIEs

FROM XwAP-Constants;

-- *****
--
-- Common Data Types
--
-- *****

Criticality ::= ENUMERATED { reject, ignore, notify }

Presence ::= ENUMERATED { optional, conditional, mandatory }

PrivateIE-ID ::= CHOICE {
    local          INTEGER (0.. maxPrivateIEs),
    global         OBJECT IDENTIFIER
}

ProcedureCode ::= INTEGER (0..255)

ProtocolExtensionID ::= INTEGER (0.. maxProtocolExtensions)

ProtocolIE-ID ::= INTEGER (0.. maxProtocolIEs)

TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome }
END

```

9.3.7 Constant definitions

```

-- *****
--
-- Constant definitions
--
-- *****

XwAP-Constants {
    itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
    eps-Access (21) modules (3) xwap (8) version1 (1) xwap-Constants (4) }

```

```
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN

-- *****
--
-- IE parameter types from other modules.
--
-- *****

IMPORTS
    ProcedureCode,
    ProtocolIE-ID

FROM XwAP-CommonDataTypes;

-- *****
--
-- Elementary Procedures
--
-- *****

id-xwSetup                ProcedureCode ::= 0
id-wTConfigurationUpdate  ProcedureCode ::= 1
id-wTStatusReportingInitiation ProcedureCode ::= 2
id-wTStatusReporting      ProcedureCode ::= 3
id-errorIndication        ProcedureCode ::= 4
id-reset                  ProcedureCode ::= 5
id-wTAdditionPreparation  ProcedureCode ::= 6
id-eNBInitiatedWTModification ProcedureCode ::= 7
id-wTInitiatedWTModification ProcedureCode ::= 8
id-eNBInitiatedWTRelease  ProcedureCode ::= 9
id-wTInitiatedWTRelease   ProcedureCode ::= 10
id-wTAssociationConfirmation ProcedureCode ::= 11
id-privateMessage         ProcedureCode ::= 12

-- *****
--
-- Extension constants
--
-- *****

maxPrivateIEs            INTEGER ::= 65535
maxProtocolExtensions    INTEGER ::= 65535
maxProtocolIEs          INTEGER ::= 65535

-- *****
--
-- Lists
--
```


-- *****

```

maxnoofBands          INTEGER ::= 256
maxnoofBearers        INTEGER ::= 256
maxnoofBSSs           INTEGER ::= 4096
maxnoofErrors         INTEGER ::= 256
maxnoofFailedMeasObjects  INTEGER ::= 32
maxnoofMobilitySetItems  INTEGER ::= 1024
maxnoofWLANIdentifierItems  INTEGER ::= 4096

```

-- *****

--

-- IEs

--

-- *****

```

id-BSSMeasurementResult-Item      ProtocolIE-ID ::= 0
id-BSSMeasurementResult-List     ProtocolIE-ID ::= 1
id-BSSToReport-Item              ProtocolIE-ID ::= 2
id-BSSToReport-List              ProtocolIE-ID ::= 3
id-Cause                          ProtocolIE-ID ::= 4
id-CompleteFailureCauseInformation-Item  ProtocolIE-ID ::= 5
id-CompleteFailureCauseInformation-List  ProtocolIE-ID ::= 6
id-CriticalityDiagnostics         ProtocolIE-ID ::= 7
id-ENB-Measurement-ID             ProtocolIE-ID ::= 8
id-Global-ENB-ID                  ProtocolIE-ID ::= 9
id-MeasurementFailureCause-Item   ProtocolIE-ID ::= 10
id-MeasurementInitiationResult-Item ProtocolIE-ID ::= 11
id-MeasurementInitiationResult-List ProtocolIE-ID ::= 12
id-PartialSuccessIndicator        ProtocolIE-ID ::= 13
id-Registration-Request           ProtocolIE-ID ::= 14
id-ReportCharacteristics          ProtocolIE-ID ::= 15
id-ReportingPeriodicity           ProtocolIE-ID ::= 16
id-WLANIdentifier-Item            ProtocolIE-ID ::= 17
id-WLANIdentifier-List           ProtocolIE-ID ::= 18
id-WLANIdentifiersToAdd-List     ProtocolIE-ID ::= 19
id-WLANIdentifiersToDelete-Item  ProtocolIE-ID ::= 20
id-WLANIdentifiersToDelete-List  ProtocolIE-ID ::= 21
id-WLANIdentifiersToModify-List  ProtocolIE-ID ::= 22
id-WTID                           ProtocolIE-ID ::= 23
id-WT-Measurement-ID             ProtocolIE-ID ::= 24
id-ENB-UE-XwAP-ID                ProtocolIE-ID ::= 25
id-WT-UE-XwAP-ID                 ProtocolIE-ID ::= 26
id-BSS-Item                       ProtocolIE-ID ::= 27
id-E-RABs-ToBeAdded-List         ProtocolIE-ID ::= 28
id-E-RABs-ToBeAdded-Item        ProtocolIE-ID ::= 29
id-UE-Identity                    ProtocolIE-ID ::= 30
id-WLANSecurityInfo              ProtocolIE-ID ::= 31
id-E-RABs-Admitted-ToBeAdded-List ProtocolIE-ID ::= 32
id-E-RABs-Admitted-ToBeAdded-Item ProtocolIE-ID ::= 33
id-E-RABs-NotAdmitted-List       ProtocolIE-ID ::= 34
id-E-RAB-Item                     ProtocolIE-ID ::= 35

```

```

id-UE-ContextInformationWTModReq      ProtocolIE-ID ::= 36
id-E-RABs-ToBeAdded-ModReqItem       ProtocolIE-ID ::= 37
id-E-RABs-ToBeModified-ModReqItem    ProtocolIE-ID ::= 38
id-E-RABs-ToBeReleased-ModReqItem    ProtocolIE-ID ::= 39
id-E-RABs-Admitted-ToBeAdded-ModAckList ProtocolIE-ID ::= 40
id-E-RABs-Admitted-ToBeAdded-ModAckItem ProtocolIE-ID ::= 41
id-E-RABs-Admitted-ToBeModified-ModAckList ProtocolIE-ID ::= 42
id-E-RABs-Admitted-ToBeModified-ModAckItem ProtocolIE-ID ::= 43
id-E-RABs-Admitted-ToBeReleased-ModAckList ProtocolIE-ID ::= 44
id-E-RABs-Admitted-ToBeReleased-ModAckItem ProtocolIE-ID ::= 45
id-E-RABs-ToBeReleased-ModReqdList   ProtocolIE-ID ::= 46
id-E-RABs-ToBeReleased-ModReqdItem   ProtocolIE-ID ::= 47
id-E-RABs-ToBeReleased-List-RelReq   ProtocolIE-ID ::= 48
id-E-RABs-ToBeReleased-RelReqItem    ProtocolIE-ID ::= 49
id-E-RABs-ToBeReleased-List-RelConf  ProtocolIE-ID ::= 50
id-E-RABs-ToBeReleased-RelConfItem   ProtocolIE-ID ::= 51
id-E-RABs-Confirmed-ToBeReleased-ModReqdList ProtocolIE-ID ::= 52
id-E-RABs-Confirmed-ToBeReleased-ModReqdItem ProtocolIE-ID ::= 53
id-MobilitySet                       ProtocolIE-ID ::= 54
id-ServingPLMN                       ProtocolIE-ID ::= 55
id-E-RABs-ToBeModified-ModReqdList   ProtocolIE-ID ::= 56
id-E-RABs-ToBeModified-ModReqdItem   ProtocolIE-ID ::= 57
id-E-RABs-Confirmed-ToBeModified-ModReqdList ProtocolIE-ID ::= 58
id-E-RABs-Confirmed-ToBeModified-ModReqdItem ProtocolIE-ID ::= 59
id-wLANBandInformation               ProtocolIE-ID ::= 60
id-WLANIdentifiersToDeleteExtension-Item ProtocolIE-ID ::= 61
id-WLANIdentifiersToDeleteExtension-List ProtocolIE-ID ::= 62

```

END

9.3.8 Container definitions

```

-- *****
--
-- Container definitions
--
-- *****

XwAP-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) xwap (8) version1 (1) xwap-Containers (5) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules.
--
-- *****

```

```

IMPORTS
    Criticality,
    Presence,
    PrivateIE-ID,
    ProtocolExtensionID,
    ProtocolIE-ID
FROM XwAP-CommonDataTypes

    maxPrivateIEs,
    maxProtocolExtensions,
    maxProtocolIEs
FROM XwAP-Constants;

-- *****
--
-- Class Definition for Protocol IES
--
-- *****

XWAP-PROTOCOL-IES ::= CLASS {
    &id          ProtocolIE-ID          UNIQUE,
    &criticality Criticality,
    &Value,
    &presence    Presence
}
WITH SYNTAX {
    ID          &id
    CRITICALITY &criticality
    TYPE        &Value
    PRESENCE    &presence
}

-- *****
--
-- Class Definition for Protocol IES
--
-- *****

XWAP-PROTOCOL-IES-PAIR ::= CLASS {
    &id          ProtocolIE-ID          UNIQUE,
    &firstCriticality Criticality,
    &FirstValue,
    &secondCriticality Criticality,
    &SecondValue,
    &presence    Presence
}
WITH SYNTAX {
    ID          &id
    FIRST CRITICALITY &firstCriticality
    FIRST TYPE        &FirstValue
    SECOND CRITICALITY &secondCriticality
    SECOND TYPE        &SecondValue
}

```

```

    PRESENCE          &presence
  }
-- *****
--
-- Class Definition for Protocol Extensions
--
-- *****

XWAP-PROTOCOL-EXTENSION ::= CLASS {
    &id                ProtocolExtensionID          UNIQUE,
    &criticality       Criticality,
    &Extension,
    &presence          Presence
}
WITH SYNTAX {
    ID                 &id
    CRITICALITY        &criticality
    EXTENSION          &Extension
    PRESENCE           &presence
}
-- *****
--
-- Class Definition for Private IEs
--
-- *****

XWAP-PRIVATE-IES ::= CLASS {
    &id                PrivateIE-ID,
    &criticality       Criticality,
    &Value,
    &presence          Presence
}
WITH SYNTAX {
    ID                 &id
    CRITICALITY        &criticality
    TYPE               &Value
    PRESENCE           &presence
}
-- *****
--
-- Container for Protocol IEs
--
-- *****

ProtocolIE-Container { XWAP-PROTOCOL-IES : IEsSetParam} ::=
    SEQUENCE (SIZE (0..maxProtocolIEs)) OF
    ProtocolIE-Field {{IEsSetParam}}

ProtocolIE-SingleContainer { XWAP-PROTOCOL-IES : IEsSetParam} ::=
    ProtocolIE-Field {{IEsSetParam}}

```

```

ProtocolIE-Field { XWAP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
    id                XWAP-PROTOCOL-IES.&id                ({IEsSetParam}),
    criticality       XWAP-PROTOCOL-IES.&criticality       ({IEsSetParam}@id}),
    value            XWAP-PROTOCOL-IES.&Value            ({IEsSetParam}@id)}
}

-- *****
--
-- Container for Protocol IE Pairs
--
-- *****

ProtocolIE-ContainerPair { XWAP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
    SEQUENCE (SIZE (0..maxProtocolIEs)) OF
        ProtocolIE-FieldPair {{IEsSetParam}}

ProtocolIE-FieldPair { XWAP-PROTOCOL-IES-PAIR : IEsSetParam} ::= SEQUENCE {
    id                XWAP-PROTOCOL-IES-PAIR.&id                ({IEsSetParam}),
    firstCriticality  XWAP-PROTOCOL-IES-PAIR.&firstCriticality  ({IEsSetParam}@id}),
    firstValue       XWAP-PROTOCOL-IES-PAIR.&FirstValue       ({IEsSetParam}@id}),
    secondCriticality XWAP-PROTOCOL-IES-PAIR.&secondCriticality  ({IEsSetParam}@id}),
    secondValue      XWAP-PROTOCOL-IES-PAIR.&SecondValue      ({IEsSetParam}@id)}
}

-- *****
--
-- Container Lists for Protocol IE Containers
--
-- *****

ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, XWAP-PROTOCOL-IES : IEsSetParam} ::=
    SEQUENCE (SIZE (lowerBound..upperBound)) OF
        ProtocolIE-SingleContainer {{IEsSetParam}}

ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, XWAP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
    SEQUENCE (SIZE (lowerBound..upperBound)) OF
        ProtocolIE-ContainerPair {{IEsSetParam}}

-- *****
--
-- Container for Protocol Extensions
--
-- *****

ProtocolExtensionContainer { XWAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
    SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
        ProtocolExtensionField {{ExtensionSetParam}}

ProtocolExtensionField { XWAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
    id                XWAP-PROTOCOL-EXTENSION.&id                ({ExtensionSetParam}),
    criticality       XWAP-PROTOCOL-EXTENSION.&criticality       ({ExtensionSetParam}@id}),
    extensionValue    XWAP-PROTOCOL-EXTENSION.&Extension        ({ExtensionSetParam}@id)}
}

```

```
}  
  
-- *****  
--  
-- Container for Private IEs  
--  
-- *****  
  
PrivateIE-Container { XWAP-PRIVATE-IES : IEsSetParam } ::=  
  SEQUENCE (SIZE (1.. maxPrivateIEs)) OF  
    PrivateIE-Field {{IEsSetParam}}  
  
PrivateIE-Field { XWAP-PRIVATE-IES : IEsSetParam } ::= SEQUENCE {  
  id                XWAP-PRIVATE-IES.&id                ( {IEsSetParam} ),  
  criticality       XWAP-PRIVATE-IES.&criticality       ( {IEsSetParam}{@id} ),  
  value            XWAP-PRIVATE-IES.&Value            ( {IEsSetParam}{@id} )  
}  
END
```

9.4 Message transfer syntax

XwAP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ITU-T Rec. X.691 [5].

10 Handling of unknown, unforeseen and erroneous protocol data

Section 10 of TS 36.413 [8] is applicable for the purposes of the present document.

Annex A (informative): Change history

Change history							
Date	TSG #	TSG Doc.	CR	Rev	Cat	Subject/Comment	New
9/2015						Initial skeleton	0.0.1
10/2015						Inclusion of text proposals agreed at RAN WG3#89bis	0.0.2
11/2015						Editorial revisions and corrections	0.0.3
11/2015						Inclusion of text proposals agreed at RAN WG3#90	0.0.4
12/2015	RAN#70					Presentation to RAN#70 for information	1.0.0
01/2016						Editorial revisions and corrections	1.1.0
01/2016						Inclusion of text proposals agreed at RAN WG3 Adhoc NBloT	1.2.0
02/2016						Editorial revisions and corrections	1.3.0
02/2016						Inclusion of text proposals agreed at RAN WG3#91	1.4.0
03/2016	RAN#71					Presentation to RAN#71 for approval	2.0.0
03/2016	RAN#71					Upgraded to Rel-13 and placed under change control	13.0.0
06/2016	RAN#72	RP-161046	3	2	F	Addition of measurement configuration	13.1.0
06/2016	RAN#72	RP-161046	4	1	F	Correction on RESET procedure	13.1.0
06/2016	RAN#72	RP-161046	5		F	Correction on WT Initiated WT Modification	13.1.0
06/2016	RAN#72	RP-161046	7	2	F	Correction on WT configuration update	13.1.0
06/2016	RAN#72	RP-161046	8	2	F	Correction on Global eNB ID	13.1.0
06/2016	RAN#72	RP-161043	12		F	Correction to WT-Initiated WT Modification	13.1.0
06/2016	RAN#72	RP-161046	14	3	F	Xw-AP corrections	13.1.0
06/2016	RAN#72	RP-161046	17	1	F	Rapporteur updates to TS 36.463	13.1.0